

# INSTALLATION AND OPERATION MANUAL



Intertek

## NAUTILUS ON DEMAND WATER HEATER (IW60) DIRECT VENT GAS *with* DIRECT SPARK IGNITION

### FOR INSTALLATION IN RECREATIONAL VEHICLES

#### **⚠ WARNING**

Failure to follow safety warning exactly could result in serious injury, death or property damage.

- **Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.**
- **WHAT TO DO IF YOU SMELL GAS**
  - Evacuate all persons from the vehicle.
  - Shut off the gas supply at the gas container or source.
  - Do not touch any electrical switch, or use any phone or radio in the vehicle.
  - Do not start the vehicle's engine or electric generator.
  - Contact the nearest gas supplier or qualified service technician for repairs.
  - If you cannot reach a gas supplier or qualified service technician, contact the nearest fire department.
  - Do not turn on the gas supply until the gas leak(s) has been repaired.
- **Installation and service must be performed by a qualified installer, service agency or the gas supplier.**

#### **⚠ FREEZE WARNING**

Drain or fill with RV approved antifreeze if subject to freezing temperatures when storing for winter.

#### **⚠ WARNING**

Installation of this appliance must be made in accordance with the written instructions provided in this manual. No agent, representative or employee of Suburban or other person has the authority to change, modify or waive any provision of the instructions contained in this manual.

Improper adjustment, alteration, service, maintenance or installation can cause serious injury or death.

Read and follow all instructions and precautions in this manual. Installation and service must be performed by a qualified service agency or the gas supplier.

AN ODORANT IS ADDED TO THE GAS USED BY THIS WATER HEATER.

**INSTALLER:** AFFIX THESE INSTRUCTIONS TO OR ADJACENT TO WATER HEATER.

**OWNER:** RETAIN THESE INSTRUCTIONS AND WARRANTY FOR FUTURE REFERENCE.

ALL TECHNICAL AND WARRANTY QUESTIONS SHOULD BE DIRECTED TO THE COMPANY LISTED ON THE WARRANTY OR RATING PLATE WHICH CAME WITH YOUR WATER HEATER.



**Suburban**

## **⚠ SAFETY WARNING**

Should overheating occur, or the gas supply fail to shut off, shut off the manual gas valve to the appliance before shutting off the electrical supply.

Do not use this appliance if any part has been submerged under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control that has been submerged under water.

Do not alter the operation of your water heater nor change the design/construction of your water heater. Accessories are being marketed for RV products which we do not recommend. For your safety, only factory authorized parts are to be used on your water heater.

Periodically inspect the vent for obstructions or presence of soot. Soot is formed whenever combustion is incomplete. This is your visual warning that the water heater is operating in an unsafe manner. If soot is present, immediately shut the water heater down and contact your dealer or a qualified service person.

When considering add-on rooms, porch or patio, attention must be given to the venting of your water heater. For your safety, do not terminate the vent on your water heater inside add-on rooms, screen porch or onto patios. Doing so will result in products of combustion being vented into the rooms or occupied areas.

Never operate the appliance if you smell gas. Do not assume that the smell of gas in your RV is normal. Any time you detect the odor of gas, it is to be considered life threatening and corrected immediately. Extinguish any open flames including cigarettes and evacuate all persons from the vehicle. Shut off gas supply at LP gas bottle. (See Safety notice on front cover of this manual.)

## **⚠ WARNING**

Do not store or use combustible materials or liquids near or adjacent to this heater. The appliance shall not be installed in any location where flammable liquids or vapors are likely to be present.

## **⚠ WARNING**

Be sure the power is "OFF" to the water heater ignition system during any type of refueling and while vehicle is in motion or being towed.

The thermostat on your water heater is adjustable. It is a temperature sensing limit designed to maintain a water temperature of 120°F (48°C) from the factory. (See Operating Instructions) Water temperatures over 125°F (52°C) can cause severe burns instantly or death from scalds; therefore, be careful when using hot water. Children, disabled and elderly are at highest risk of being scalded. Always feel water before bathing or showering.

### INSTALLATION REQUIREMENTS

## **⚠ WARNING**

Installation of this appliance must be made in accordance with the written instructions provided in this manual. No agent, representative or employee of Suburban or other person has the authority to change, modify or waive any provision of the instructions contained in this manual.

## **⚠ CAUTION**

A Suburban vent cap must be installed on the unit and all side inspection panels must be in place for proper water heater operation.

If possible, do not install the water heater to where the vent can be covered or obstructed when any door on the trailer is opened. If this is not possible, then the travel of the door must be restricted in order to provide a 6" minimum clearance between the water heater vent and any door whenever the door is opened.

Due to the differences in vinyl siding, this appliance should not be installed on vinyl siding without first consulting with the manufacturer of the siding or cutting the siding away from the area around the appliance vent.

In any installation in which the vent of this appliance can be covered due to the construction of the RV or some special feature of the RV such as slide out, pop-up etc., always insure that the appliance cannot be operated by setting the thermostat to the positive "OFF" position and shutting off all electrical and gas supply to the appliance.

Do not install this appliance to where the vent terminates below a slide-out. This appliance is not to be installed under any overhang. It must be free and clear of any type overhang.

This installation must conform with the requirements of the authority having jurisdiction or in the absence of such requirements with the latest edition of the National Fuel Gas Code ANSI Z223.1/NFPA 54; and the latest edition of the American National Standard for Recreational Vehicles NFPA 1192.

**In Canada,** the installation should conform with the following standards:

**A. For installation in Recreational Vehicle**

1. Gas - CSA standard CSA Z240.4.2-08 Installation Requirements for Propane Appliances and Equipment in Recreations Vehicles.
2. Electrical - CSA standard C22.2 No. 148/Z240.6.2-08/C22.2 No. 148-08 Electrical Requirements for Recreational Vehicles.
3. Plumbing - CSA standard CSA Z240.3.2 Plumbing Requirements for Recreational Vehicles.
- B. The appliance shall be disconnected from the gas supply piping system during any pressure testing of the system.
- C. The appliance and its gas connections shall be leak tested before placing the appliance in operation.
- D. All air for combustion must be supplied from outside the structure. Air for combustion must not be supplied from occupied spaces.
- E. Minimum clearance from combustible construction on sides and top - 1/4 inches. Provide room for access to rear of heater and at left side for servicing.
- F. Choose a location for installation out of the way of wires, pipes, etc. that might interfere with the installation.
- G. When an appliance is installed directly on carpeting, tile or other combustible material, other than wood flooring, the appliance shall be installed on a metal or wood panel the full depth of the appliance. If preferred the carpeting, tile or combustibles materials, other than wood may be cut away the full length of the appliance plus the appliance minimum clearances to combustibles.
- H. Good grounding of the unit is recommended to mitigate static charge built up by attaching a 12 gage ground wire to the unit case at the green grounding screw shown in **Figure 5** and securely fasten the ground wire to the RV metal frame.
- I. Do not install the water heater with the vent facing toward the forward end of the coach. **See Figures 1, 2 and 3.**
- J. There must be access for removing unit for service.

### INSTALLATION WITHOUT REPLACEMENT PANEL

1. Locate area for installation of the unit. The unit should be installed as close to wall as possible. Mark wall as shown in **Figure 4** and cut a 3.750" Diameter hole for vent installation. On mesa or yoder type side walls, it may be required to flatten area where vent is to be installed to assure seal around vent assembly.
2. Place unit on floor (verify vent cap lines up with exhaust tube and combustion air opening in unit).
  - a. Drain lines must be connected to the system and condensation drains on the On Demand water heater and ran to the outside of the RV. Drain Lines should be as short as possible and must maintain a drop of 1/4" per foot from unit. See **Figure 5**.
3. Install vent assembly. See **Figure 6**.
  - a. Vent cap must be ordered separately. See **TABLE 1** for vent sizes and part numbers. A minimum overlap of 1.25" is required on exhaust.
  - b. Apply a bead of silicone around the vent cap as shown in **Figure 6**.
  - c. Install vent cap as shown in **Figure 6** with screws. Insure assembly is sealed to outside wall to prevent leaks.
4. Screw the front of the unit to the floor using the two brackets as shown in **Figure 5**. If necessary, the brackets can be moved to the rear of the unit as shown in **Figure 7B**.
5. Make gas, water and electrical connections following instructions contained in this manual supplied with the Suburban NAUTILUS (IW60) On Demand Water Heater.

### INSTALLATION USING REPLACEMENT PANEL

A replacement panel is used when replacing Suburban 6, 10, 12, and 16 gallon tank units and Atwood Style 6 and 10 gallon tank units.

1. On mesa or yoder type sidewalls, flatten the wall area around the opening.
2. Apply a continuous line of suitable caulk on the RV wall around all four sides of the opening and around back side of replacement panel frame as shown in **Figure 8**. Required to create water tight seal of the frame to the RV wall.
3. Center and insert caulked replacement panel frame into opening. Push frame firmly against RV wall over caulking previously applied in step 2. Secure frame with the eight (8) supplied screws into RV wall as shown in **Figure 8**.
4. Locate the water heater cabinet approximately even with the inside RV wall. See **Figure 7B**. If securing the unit to the floor using the FRONT mounting brackets, proceed to STEP 5. To mount the water heater using the REAR mounting method, remove the two mounting brackets from the front of the unit and secure them to the threaded holes at the rear of the unit. Screw the rear of the unit to the floor using the two brackets. See **Figure 7B**.
5. Using the gasket supplied with the kit, apply the gasket beginning at the center bottom of the replacement panel frame. Adhere the adhesive side of the gasket to the replacement panel frame and install the gasket all the way around the frame. Insure the ends of the gasket meet at the center bottom of the access panel frame.
6. Attach the replacement panel to the frame as shown in **Figure 8** using the five (5) screws provided.
7. Vent cap must be ordered separately. See **Table 1** for vent sizes and part numbers. There must be a minimum of 1.25" (31.8mm) overlap of vent assembly tube over exhaust tube on the On Demand Water Heater and the replacement panel must compress the replacement panel gasket. See **Figure 7A**.
  - a. Apply a bead of silicone around the vent cap as shown in **Figure 8**.
  - b. Install vent cap as shown in **Figure 8** with four (4) screws. Insure assembly is sealed to outside wall to prevent leaks.
8. Screw the front of the unit to the floor using the two brackets as shown in **Figure 5**.
9. Apply silicone caulk around the beveled edges of the replacement panel as shown in **Figure 8**. Do not caulk the bottom of the replacement panel.
10. Make gas, water and electrical connections following instructions contained in this manual supplied with the Suburban Nautilius IW60 On Demand Water Heater.

**11. Drain lines must be connected to the system and condensation drains on the On Demand Water Heater and ran to the outside of the RV. Drain Lines should be as short as possible and must maintain a minimum drop of 1/4" per foot. (6.4mm per 305mm) from unit. See **Figure 5**.**

ACCESS PANEL PART NUMBERS		
BRAND	CAPACITIES	PART NUMBER
SUBURBAN	6 GALLON	6276APW (Polar White)
SUBURBAN	10, 12, 16 GALLONS	6277APW (Polar White)
ATWOOD	6 GALLON	521147 (Polar White)
ATWOOD	10 GALLON	521150 (Polar White)

VENT CAP PART NUMBER	VENT CAP LENGTH	"X" MAX DIMENSION
260616	0 - 1 inches	1.171 inch
260617	1 - 2 inches	2.171 inch
260618	2 - 3 inches	3.171 inch
260638	5 - 6 inches	6.171 inch

**TABLE 1**

### MAKING ELECTRICAL CONNECTIONS 12 VOLTS D.C.

**A.** The electrical connections must be made in accordance with local codes and regulations. In the absence of local codes and regulations, refer to the latest edition of the National Electrical Code NFPA 70.

**In Canada,** the electrical installation should conform with CSA standard Z240.6.2-08/C22.2 No. 148-08 Electrical Requirements for Recreational Vehicles.

**B.** Make the 12 Volt D.C. electrical connections following the wiring diagram illustrated in **Figure 11**.

If the power supply is to be from a convertor, we recommend that the converter system be wired in parallel with the battery. This will serve two purposes:

1. Provide a constant voltage supply
2. Filter any A.C. spikes or volt surges

We recommend insulated terminals be used for all electrical connections.

### INSTALLATION OF SWITCH AND LIGHT ASSEMBLY (SEE FIGURE 12)

1. ON/OFF switch is wired as shown in wiring diagram. See **Figure 11**.
2. There is a connection for a lockout light. (If used, this light will come on if the unit goes into lockout. Water must be turned off and back on to re-cycle the unit.)
3. Connect ORANGE wire to LED lamp (+) and BLUE wire to LED lamp (-).

### INSTALLATION OF OPTIONAL ON DEMAND CONTROL CENTER (SEE FIGURE 13)

#### ⚠ WARNING

Do not use on circuits exceeding specified voltage. Higher voltage will damage control center and could cause shock or fire hazard. Do not short out terminals on gas valve or primary control to test. Short or incorrect wiring will damage thermostat and could cause personal injury and/or property damage.

1. On Demand Control Center is wired as shown in wiring diagram. See **Figure 11**.
2. Locate the On Demand CONTROL CENTER on a wall surface adjacent to the On Demand water heater.
3. Remove back cover from control center by depressing latch at bottom.
4. Remove center knockout from back cover. Drill hole for wiring from control center. See **Figure 14**.
5. Mount back cover to the wall.
6. Route wiring through back cover and hole into wall.
7. Connect the two white wires from the On Demand Control Center to the two white wires from the On Demand water heater. See **Figure 11**.
8. Isolate and cover the Blue and Orange wires with electrical tape to ensure no contact to ground is possible.

The optional On Demand CONTROL CENTER displays the water temperature and also allows outlet water temperature to be adjusted (130°F maximum).

ON DEMAND CONTROL CENTER	PART NUMBER
BLACK (1ST GENERATION)	161253
WHITE (1ST GENERATION)	161252
BLACK (2ND GENERATION)	161292
WHITE (2ND GENERATION)	161291

### MAKING DRAIN CONNECTIONS

- A. Drain connections are made at the front of the water heater. Refer to **Figure 5**. Connect 5/8" ID hose to system drain fitting provided on front of unit. Connect 1/2" ID hose to condensation drain fitting provided on front of unit.

- B. Drain lines must run to the outside of the RV. Drain lines should be as short as possible and must maintain a minimum drop of  $\frac{1}{4}$ " per foot. (6.4mm per 305mm). See **Figure 5**.

## MAKING WATER CONNECTIONS

- A. Water connections are made at the front of the water heater. Refer to **Figure 5**. Connect the hot and cold water lines to the 1/2" NPT female pipe fitting provided on front of unit. These fittings are marked "HOT" and "COLD".
- IMPORTANT:** Use a pipe thread compound suitable for potable water or pipe thread tape on all connections to assure they will not leak.
- B. For ease of removal, it is suggested that a pipe union be installed in each water line.
- C. Fill system with water. Open both hot and cold water faucets to expel air from system. When system is filled and water flows from faucets, close both faucets and check all connections for leaks.

## CAUTION

If you use air pressure to check for leaks, the pressure must not exceed 30 PSI in accordance with NFPA 1192.

**NOTE:** After leak testing, drain water from system. See **Figure 10**. Please refer to the DRAINING AND STORAGE INSTRUCTIONS in this manual for draining water from the system.

## MAKING GAS CONNECTIONS

- A. Connect a 3/8" gas supply line to the 3/8" flare fitting at gas valve. When making the gas connection, hold the gas fitting on the valve with a wrench when tightening the flare nut. Failure to hold fitting securely could result in a gas leak due to fitting being damaged.
- B. Turn on gas and check all fittings and connections for leaks using a soap and water solution. Correct even the slightest leak immediately.

**NOTE:** When replacing your water heater with an NAUTILUS (IW60) On Demand water heater, review your gas regulator to ensure it can maintain a proper gas flow during the operation of the On Demand water heater and other gas burning appliances.

**NOTE:** Regulator switch over pressure may be lower than main operating pressure.

Maximum Capacity of Pipe in Cubic Feet of Gas per Hour for Gas Pressures of 0.5 PSIG or Less and a Pressure Drop of 0.3 Inch Water Column

INTENDED USE: Tubing sizing between single or second-stage (low pressure) regulator and appliance.					
Nominal:	K & L:	1/4	3/8	1/2	5/8
Nominal:	ACR:	3/8	1/2	5/8	3/4
Outside Diameter:		0.375	0.500	0.625	0.750
Inside Diameter:*		0.305	0.402	0.527	0.652
Length (feet)	Capacity in Thousands of BTU per Hour				
10	45	93	188	329	
20	31	64	129	226	
30	25	51	104	182	
40	21	44	89	155	
50	19	39	79	138	

\*Table capacities are based on TYPE K copper tubing I.D.

## WARNING

Do not use an open flame to check for leaks!

## OPERATING SAFETY INFORMATION FOR YOUR SAFETY READ BEFORE LIGHTING

## WARNING

If the user of this appliance fails to maintain it in the condition in which it was shipped from the factory or if the appliance is not used solely for its intended purpose or if appliance is not maintained in accordance with the instructions in this manual, then the risk of a fire and/or the production of carbon monoxide exists which can cause personal injury, property damage or loss of life.

If you do not follow these instructions exactly, a fire or explosion may result causing property damage, personal injury or loss of life.

- A. This appliance does not have a pilot. It is equipped with an ignition device which automatically lights the burner. Do not try to light the burner by hand.

- B. BEFORE OPERATING**, smell all around the appliance area for gas. Be sure to smell next to the floor because some gas is heavier than air and will settle on the floor.

- Evacuate all persons from the vehicle.
  - Shut off the gas supply at the gas container or source.
  - Do not touch any electrical switch, or use any phone or radio in the vehicle.
  - Do not start the vehicle's engine or electric generator.
  - Contact the nearest gas supplier or qualified service technician for repairs.
  - If you cannot reach a gas supplier or qualified service technician, contact the nearest fire department.
  - Do not turn on the gas supply until the gas leak(s) has been repaired.
- C. This unit has an automatic gas valve, no adjustments are necessary. Do not attempt to repair the gas valve. This may result in a fire or explosion.
- D. Do not use this appliance if any part has been under water. Immediately call a qualified service technician to inspect the appliance and to replace any part of the control system and any gas control which has been under water.
- E. Before operating water heater, check the location of the vent to make sure it will not be blocked by the opening of any door on the trailer. If it can be blocked, do not operate the water heater with the door open.

## OPERATING INSTRUCTIONS WITH SWITCH AND LIGHT ASSEMBLY

1. **STOP!** Read the safety information above.
2. Turn off all electric power to the appliance.
3. Turn "OFF" gas supply.
4. Wait five minutes for gas to clear the area. If you smell gas then STOP! Follow instructions in item **B** of the **OPERATING SAFETY INFORMATION**. If you do not smell gas, go to next step.
5. Turn "ON" gas supply.
6. Turn on electrical power to the appliance.
7. Turn switch that operates the water heater to "ON" position. The switch is illustrated in **Figure 12**. Your Switch may be different in appearance and is located somewhere inside the RV. The water heater operates based off of "flow." There must be a hot water faucet OPEN to a minimum of 0.5 GPM for the unit to operate. If the burner does not light, the system will automatically attempt two more tries for ignition before lock-out. When light remains illuminated, the system is in lockout.
8. If lockout occurs, unit must be re-cycled by turning the faucet OFF or turning the switch OFF and then back ON. The first start-up of the heater may require several ignition cycles before all air is purged from the gas lines.

This On Demand Water Heater is factory set at 49°C/120°F. To change the water temperature settings, you will need to access the front of the water heater.

1. Remove the SERVICE PANEL as shown in **Figure 9**.
2. Locate the set of four (4) dip switches located on the module board and refer to **Figure 12** for information on setting dip switches to desired temperature setting.

## WARNING

Dip switches numbered 1 and 2 are not to be moved from factory setting.

## OPERATING INSTRUCTIONS WITH OPTIONAL ON DEMAND CONTROL CENTER

1. **STOP!** Read the safety information above.
2. Turn off all electric power to the appliance.
3. Turn "OFF" gas supply.
4. Wait five minutes for gas to clear the area. If you smell gas then STOP! Follow instructions in item **B** of the **SAFETY INFORMATION**. If you do not smell gas, go to next step.
5. Turn "ON" gas supply.
6. Turn on electrical power to the appliance.
7. PRESS THE "ON" button. The On Demand CONTROL CENTER is illustrated in **Figure 13**. Your On Demand CONTROL CENTER is located somewhere inside the RV. The water heater operates based off of "flow." There must be a hot water faucet OPEN to a minimum of 0.5 GPM for the unit to operate. If the burner does not light, the system will automatically attempt two more tries for ignition before lock-out.
8. If lockout occurs, the unit must be re-cycled by turning the faucet OFF or by pressing the OFF button on the On Demand Control Center and then back ON. The first start-up of the heater may require several ignition cycles before all air is purged from the gas lines.

This On Demand Water Heater is factory set at 49°C/120°F. To change the water temperature settings:

1. Press the UP or DOWN arrows on the On Demand CONTROL CENTER to increase or decrease the SET water temperature in single degree increments. The water temperature set range is 35°C/95°F to 54°C/130°F. See **Figure 13**.

## SEQUENCE OF OPERATION

The following Sequence of Operation will be the same when using either the ON/OFF SWITCH or the optional On Demand CONTROL CENTER.

1. Turning on a hot water faucet activates the On Demand Water Heater.
2. The water heater senses the flow of water.
3. The water heater proves that the combustion air fan is working.
4. The combustion chamber is then purged of any remaining raw gas.
5. The burner will ignite and prove the flame.
  - a. The approximate time from turning on the faucet to ignition is 7 seconds. After the initial lighting sequence and the water heater is maintaining temperature, the ignition cycle is reduced to approximately 5 seconds.
  - b. Burners will stay ON until the water flow is shut off.

6. The flow of hot water at the SET point begins approximately 3 seconds after ignition but will not reach the faucet until the hot water lines leading to the faucet are cleared of any remaining water. This time is determined by the length of the hot water line.
  7. When the hot water faucet is turned OFF, the water heater shuts down and will remain in a ready state until hot water is called for again.
- NOTE:** Blower motor will operate for approximately 20 seconds after the hot water faucet is turned OFF.
8. If the ON/OFF SWITCH or On Demand CONTROL CENTER are left in the ON position, no further action is required by the user.
  9. If the water heater fails to light for any reason, a second Trial For Ignition(TFI) will automatically begin. If the second Trial For Ignition(TFI) fails, the water heater will automatically begin a third Trial For Ignition(TFI). If the third Trial For Ignition(TFI) fails, the water heater will go into a lock out mode and will not try to light the burner again. To reset:
    - a. Using ON/OFF SWITCH: Turn Switch OFF then back ON.
    - b. Using the On Demand CONTROL CENTER: Turn faucet OFF, then back on.

**NOTE:** The NAUTILUS (IW60) On Demand WATER HEATER has an energy mode circuit that will shut down operation if operating continuously for three (3) hours. To reset, follow the instruction in STEP 9 A or B above.

**NOTE:** Air in the gas line after changing propane tanks is the main reason for not lighting the burner. A simple method to remove air from the gas line is to ignite a burner on the installed cooking appliance inside your RV.

## OPERATING FAUCETS AND SHOWER WITH THE NAUTILUS (IW60) ON DEMAND WATER HEATER

- A. All faucets must be operated the same as you would in your home.
- B. Unit thermostat is set at 120°F at the factory. Cold water must be added to achieve the desired hot water temperature.
1. If this is the first use of the unit for the season, turn water supply on and open each faucet and allow all air to be purged from the water lines.
2. Turn ON power supply.
3. Turn ON propane supply. Hot water faucet may have to be cycled several times to purge gas supply.
- C. The water heater only heats when there is a call for water (open hot water faucet).
- D. A minimum of 0.5 gallons per minute is required for water heater to operate.
- E. Faucet should be turned on and adjusted to desired temperature and flow before entering shower.
- F. Showerhead button should NOT be used. Using the showerhead button will create a drop in temperature by reducing or stopping the flow of water through the water heater causing the water heater to shut down.
- G. Flow restrictors in faucets and shower heads should be removed for best performance.

### TO TURN OFF THE ON DEMAND WATER HEATER

1. Turn switch to "OFF" position for units using the Switch and Light Assembly.
2. For units using the optional On Demand CONTROL CENTER, press the power button once.
3. Turn off electrical power to the appliance.
4. Turn off gas supply.
5. If vehicle is to be stored or heater is going to be turned off while subject to freezing temperature, drain water heater. (See "Draining and Storage Instructions".)

## OPERATIONAL TROUBLESHOOTING

### ⚠ CAUTION

For your safety, ALL repairs and/or maintenance of unit should be performed by your dealer or a qualified service technician.

**NOTE:** There must be a demand of at least 0.5 GPM for the burner to operate and allow water flow. This will continue until the water flow is turned OFF and the system goes dormant.

#### NO WATER FLOWS FROM FAUCET WHEN TURNED ON:

1. Be sure water supply is turned ON and there are no water restrictions.

#### BURNER TURNS ON, TEMPERATURE FLUCTUATES ERRATICALLY:

1. This issue can be caused by restriction in the shower heads, faucet aerators or water strainers.
2. Clean as required and remove any flow restrictions.

#### ON DEMAND HEATER COMES ON AND RAPIDLY CYCLES ON AND OFF:

1. Water flow is too low. Increase flow at faucet.
2. Clean all shower heads, faucet aerators or water strainers as required and remove any flow restrictions to assure the minimum 0.5 GPM of water flow.
3. Verify the water pump is functioning properly.
4. Bleed air out of plumbing lines by opening all water faucets.
5. If the On Demand water heater cycles as the pump cycles, an accumulator tank is needed in the water system. If accumulator tank is already installed, check for water inside the tank and drain tank until only air is present.
6. Water source pressure fluctuates too low causing loss of flow. Check the incoming water source for a minimum of 30 psi.

#### WATER TEMPERATURE IS TOO LOW WITH LOWER WATER FLOW:

1. Water flow is too low. Increase flow at faucet to assure the minimum 0.5 GPM of water flow.

#### WATER TEMPERATURE IS TOO HIGH OR NO TEMPERATURE CONTROL:

1. For units with the Standard Switch and Light assembly, adjust the dip switches to the desired temperature. Refer to **OPERATING INSTRUCTIONS WITH SWITCH AND LIGHT ASSEMBLY** and see **Figure 12** for information on setting dip switches to desired temperature setting.
2. For units using the optional On Demand CONTROL CENTER, press the UP or DOWN arrows on the On Demand CONTROL CENTER to increase the SET water temperature in single increments. Refer to **OPERATING INSTRUCTIONS WITH OPTIONAL ON DEMAND CONTROL CENTER** and see **Figure 13**.

#### LOW TEMPERATURE RISE AND EXCESSIVE WATER FLOW REQUIRED TO TRIGGER THE ON DEMAND WATER HEATER:

**NOTE:** If you find that your water heater requires excessive flow to activate it (over 0.5 GPM), it is possible that you have COLD water bleeding into the HOT water side of your water system.

1. Verify that valves and faucets are closed when not in use. Check the shower head for an ON/OFF button/lever and ensure it is in the OFF position to prevent cold water from bleeding into the hot water system. This can keep the On Demand water heater from functioning correctly.
2. If your RV is equipped with a bypass valve at the water plumbing connection, make sure it is in the OFF position. An open valve can allow water to bypass water heater causing a failure to ignite.

#### NO IGNITION:

If the burner will not come on, the following items should also be checked before calling a service technician:

- A. Switch turned off.
- B. 12 VDC power is ON
- C. Gas supply to heater is empty or turned off.
- D. Water turned on and faucet open.
- E. Check manual reset on ECO switch. Refer to **DETAIL "A" in Figure 9**.

If burner fails to light, call a Suburban service center or a local RV service agency.

## MAINTENANCE

### ⚠ WARNING

If the user of this appliance fails to maintain it in the condition in which it was shipped from the factory or if the appliance is not used solely for its intended purpose or if appliance is not maintained in accordance with the instructions in this manual, then the risk of a fire and/or the production of carbon monoxide exists which can cause personal injury, property damage or loss of life.

For your safety, all repairs should be performed by your dealer or a qualified service person.

- A. Periodically inspect unit for soot. If soot is present anywhere on water heater, immediately shut unit down and contact your dealer or a qualified service person. Soot is a sign of incomplete combustion and must be corrected before operating water heater. Areas to check would include:
  1. Check for an obstruction in vent cap.
  2. Check vent to see that no foreign material has accumulated to prevent flow of combustion and ventilating air.
  3. Check to be sure there is no flame present at burner orifice or burner whenever main gas valve is closed. This can be checked by turning the ON/OFF switch to the "OFF" position.
- B. Periodically check wiring and wire connections to be sure wiring is not damaged/frayed and that all terminals and connections are tight and in compliance with codes (See "Making Electrical Connections").

## DRAINING AND STORAGE INSTRUCTIONS

If RV is to be stored during winter months, the water heater system must be drained to prevent damage from freezing.

1. Turn off electrical power to water heater either using the switch, the On Demand control center or by removing the fuse.
2. Shut off gas supply to water heater.
3. Turn off pressure pump on water system.
4. Open both hot and cold water faucets.
5. Remove Service Panel to access system drain valve.
6. Turn drain valve knob clockwise to drain.
7. Follow RV manufacturer's instructions for draining entire water system.

**NOTE:** System will have to be refilled with water and all air removed from lines before unit will re-light.

**NOTE: All water must be drained to the outside of the RV -** Drain lines must be connected to the system and condensation drains on the water heater and ran to the outside of the RV. Drain Lines should be as short as possible and must maintain a drop of 1/4" per foot from unit. See **Figure 10**.

## WINTERIZING

1. Follow RV manufacturer's instructions for draining entire water system.
2. Once drained, RV NON-TOXIC antifreeze can be added if recommended by your coach manufacturer.

## FREEZE PROTECTION

The NAUTILUS (IW60) On Demand water heater has built-in FREEZE PROTECTION and will intermittently cycle the burner when the water temperature has fallen below 40°F(4.4°C). This intermittent cycling will continue until the water temperature has risen above 50°F(10.0°C). To provide this freeze protection, the gas supply must be on, gas must be available and electrical power must be on.

If the On Demand Water Heater is dripping water into the drain line, in cold weather, when the water supply temperature is below 38°F and does not stop when the water temperature rises above 38°F, call your local service center. The valve may be disabled by turning the needle valve located on the front of the On Demand Water Heater 5 and 1/2 turns clockwise. Closing the valve will disable the mechanical freeze protection feature. The water system must be drained when not in use to avoid damage caused by ice expanding in water lines if valve is closed.

## DESCALING INFORMATION

Each year, drain the water from the system and flush the heat exchanger with an approved descaling solution.

## PRESSURE RELIEF VALVE

The temperature and pressure relief valve is designed to open if the temperature of the water within the heater reaches 210°F, or if the water pressure in the heater reaches 145 psi.

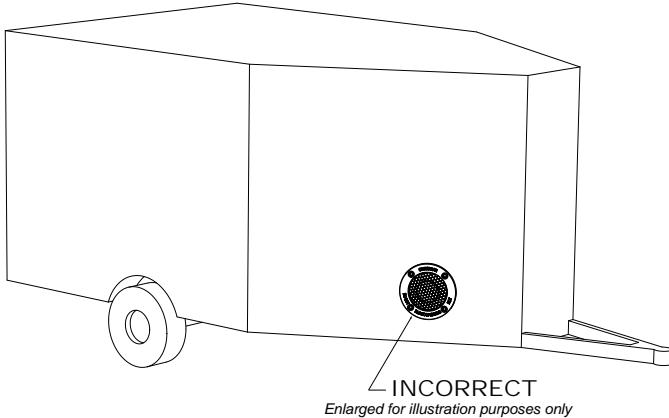


Figure 1


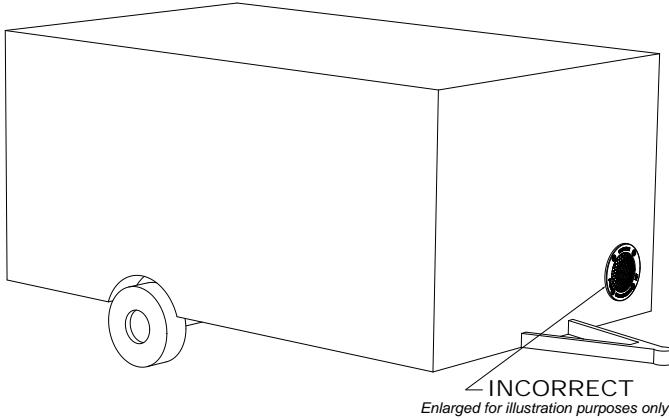


Figure 2

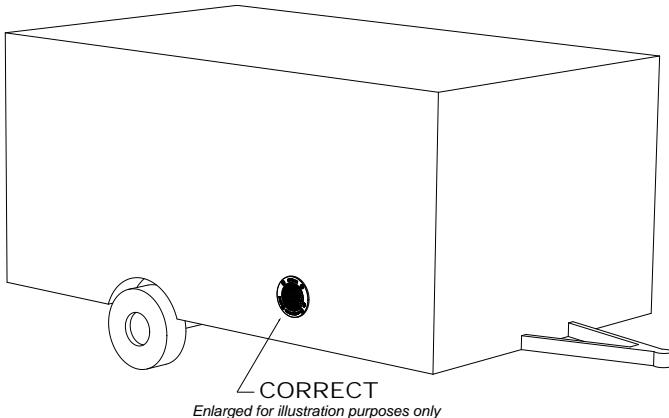

Enlarged for illustration purposes only

Figure 3

## WARNING

Do not place a valve between the relief valve and the unit.  
Do not plug the relief valve under any circumstances.

Suburban recommends that a check valve not be installed directly at the inlet to the water heating unit.

## WARNING

Do not remove or plug the relief valve.

## REMOVING ON DEMAND WATER HEATER

1. Shut off gas supply and disconnect gas supply line from water heater.
2. Disconnect 12 V.D.C. power supply to heater.
3. Shut off water supply. Drain water from system.
4. Disconnect HOT and COLD water lines from water heater.
5. Remove screws at the back of the unit.
6. Remove vent cap assembly.
7. Remove water heater. To reinstall, follow installation instructions provided in this manual beginning on page 3.

## WARNING

For your safety, ALL repairs and/or maintenance of unit should be performed by your dealer or a qualified service technician.

## PARTS AND SERVICE

Contact a conveniently located recommended Suburban Service Center. Describe to them the nature of your problem, make an appointment, if necessary, and provide for delivery of your RV with the appliance installed.

To obtain information on locating a local service agency, contact:

AIRXCEL, Inc. - Suburban Division  
Customer Service Department  
676 Broadway Street, Dayton, TN 37321  
(423) 775-2131 Ext. 7101 • [www.Airxcel.com](http://www.Airxcel.com)

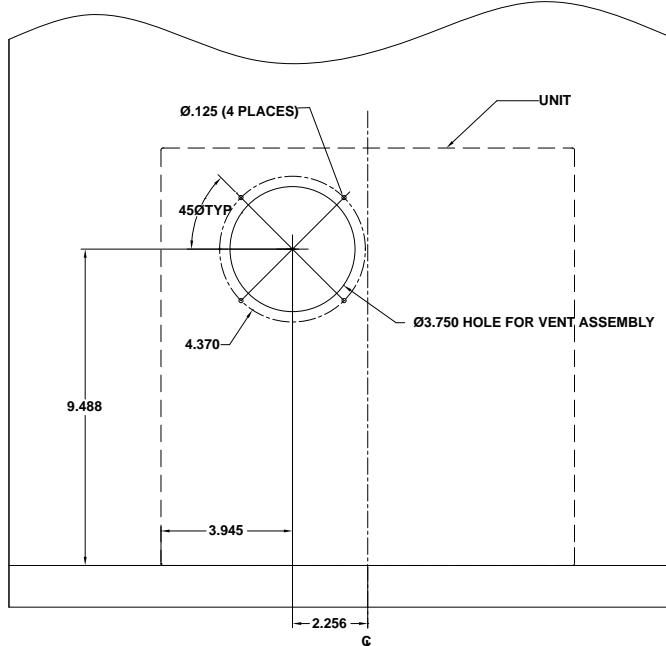


Figure 4

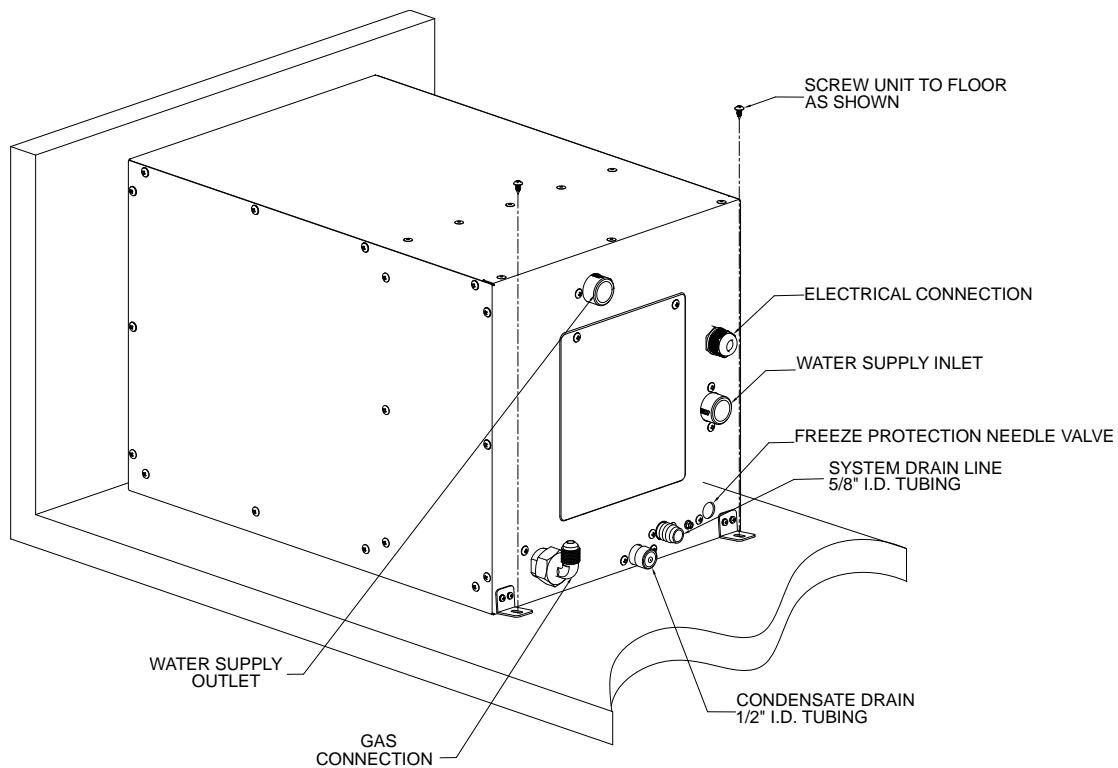


Figure 5



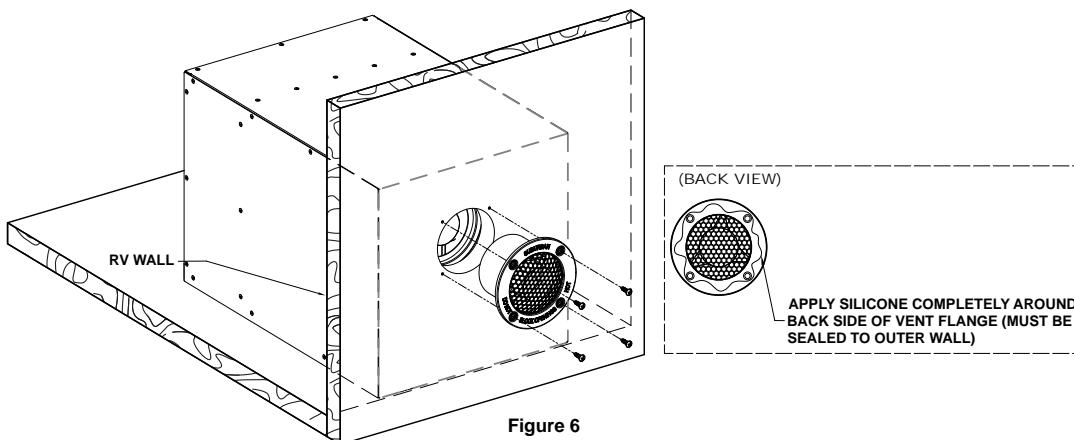


Figure 6

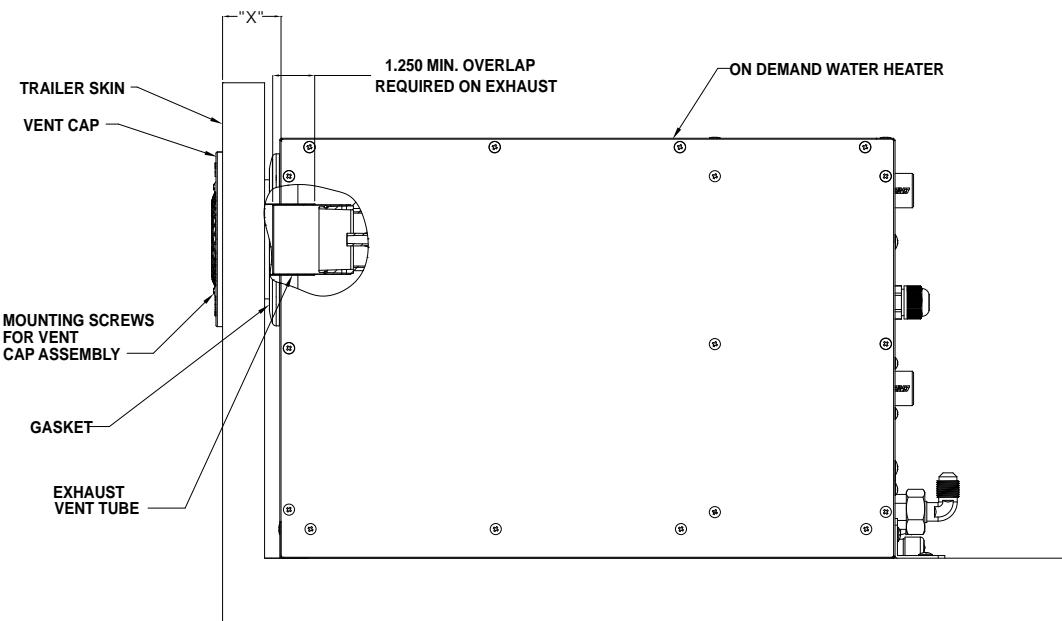

VENT CAP PART NO. 260617 SHOWN FOR INSTALLATION WITHOUT ACCESS PANEL. MAX "X" DIMENSION OF 2.00".

Figure 7A

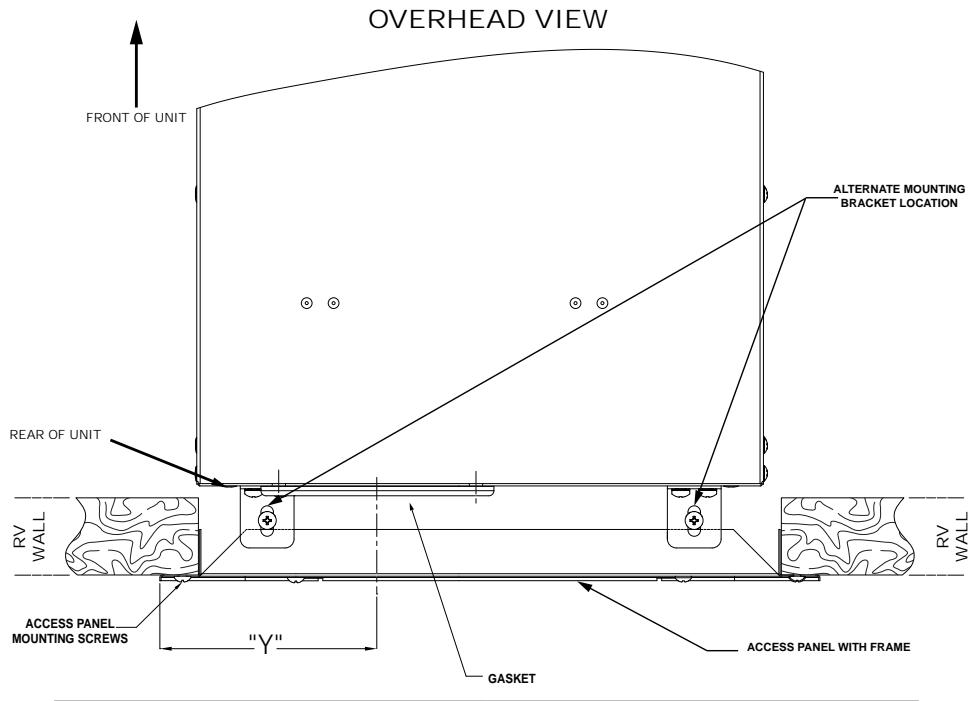

SUBURBAN ACCESS PANEL	"Y" DIMENSION
6 GALLON	4.895"
10 GALLON	6.634"

Figure 7B

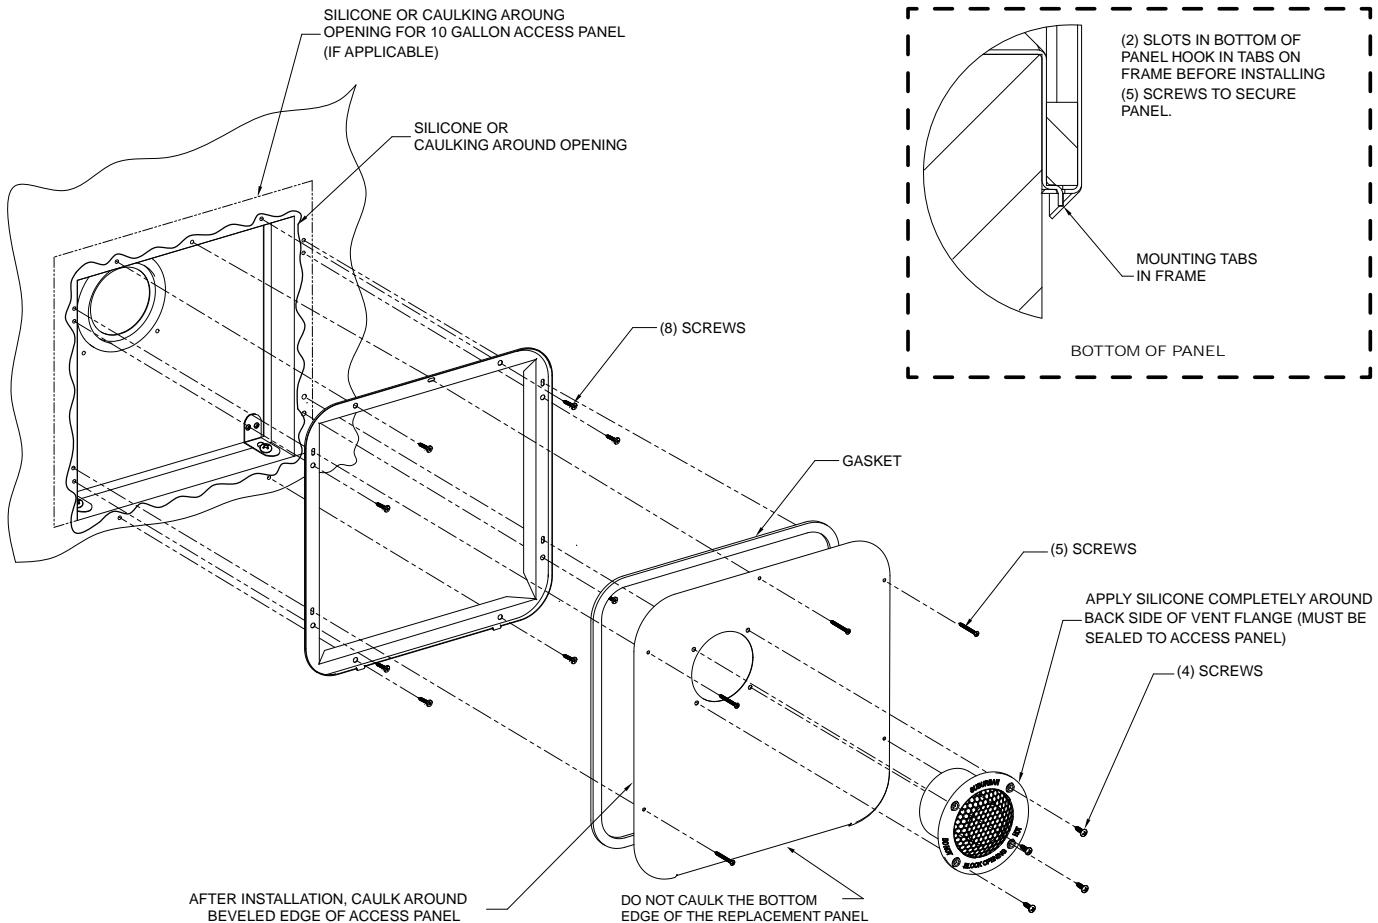


Figure 8

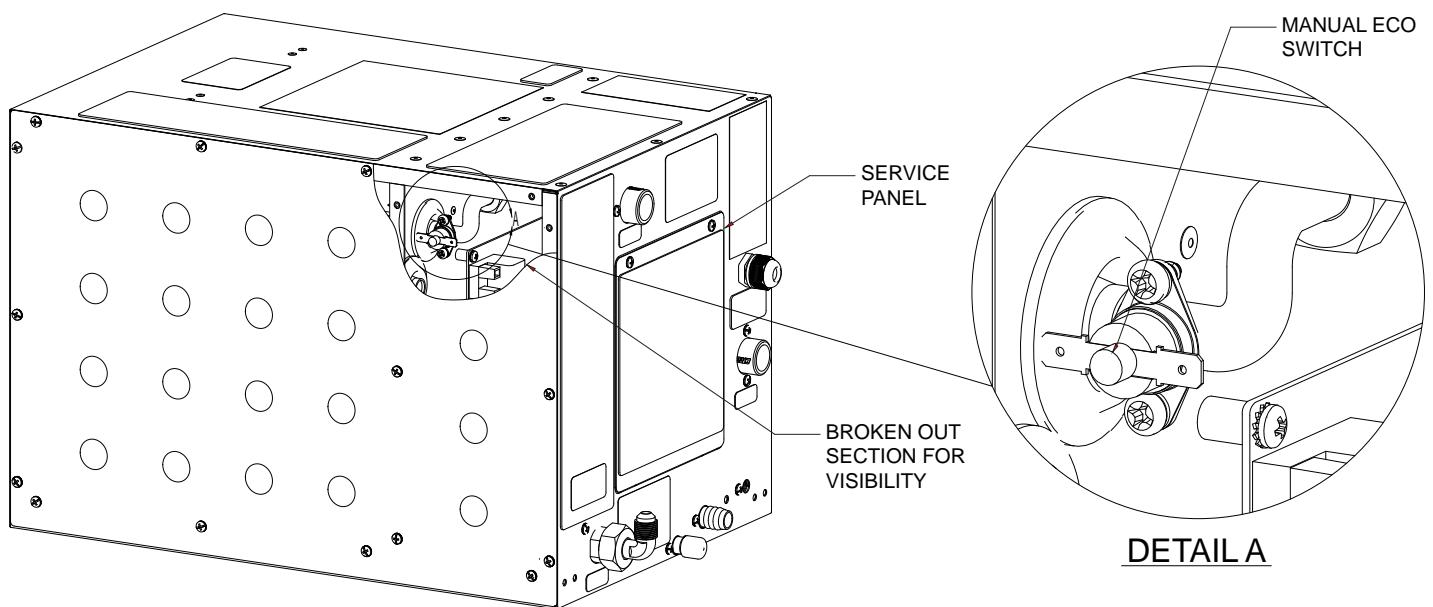


Figure 9

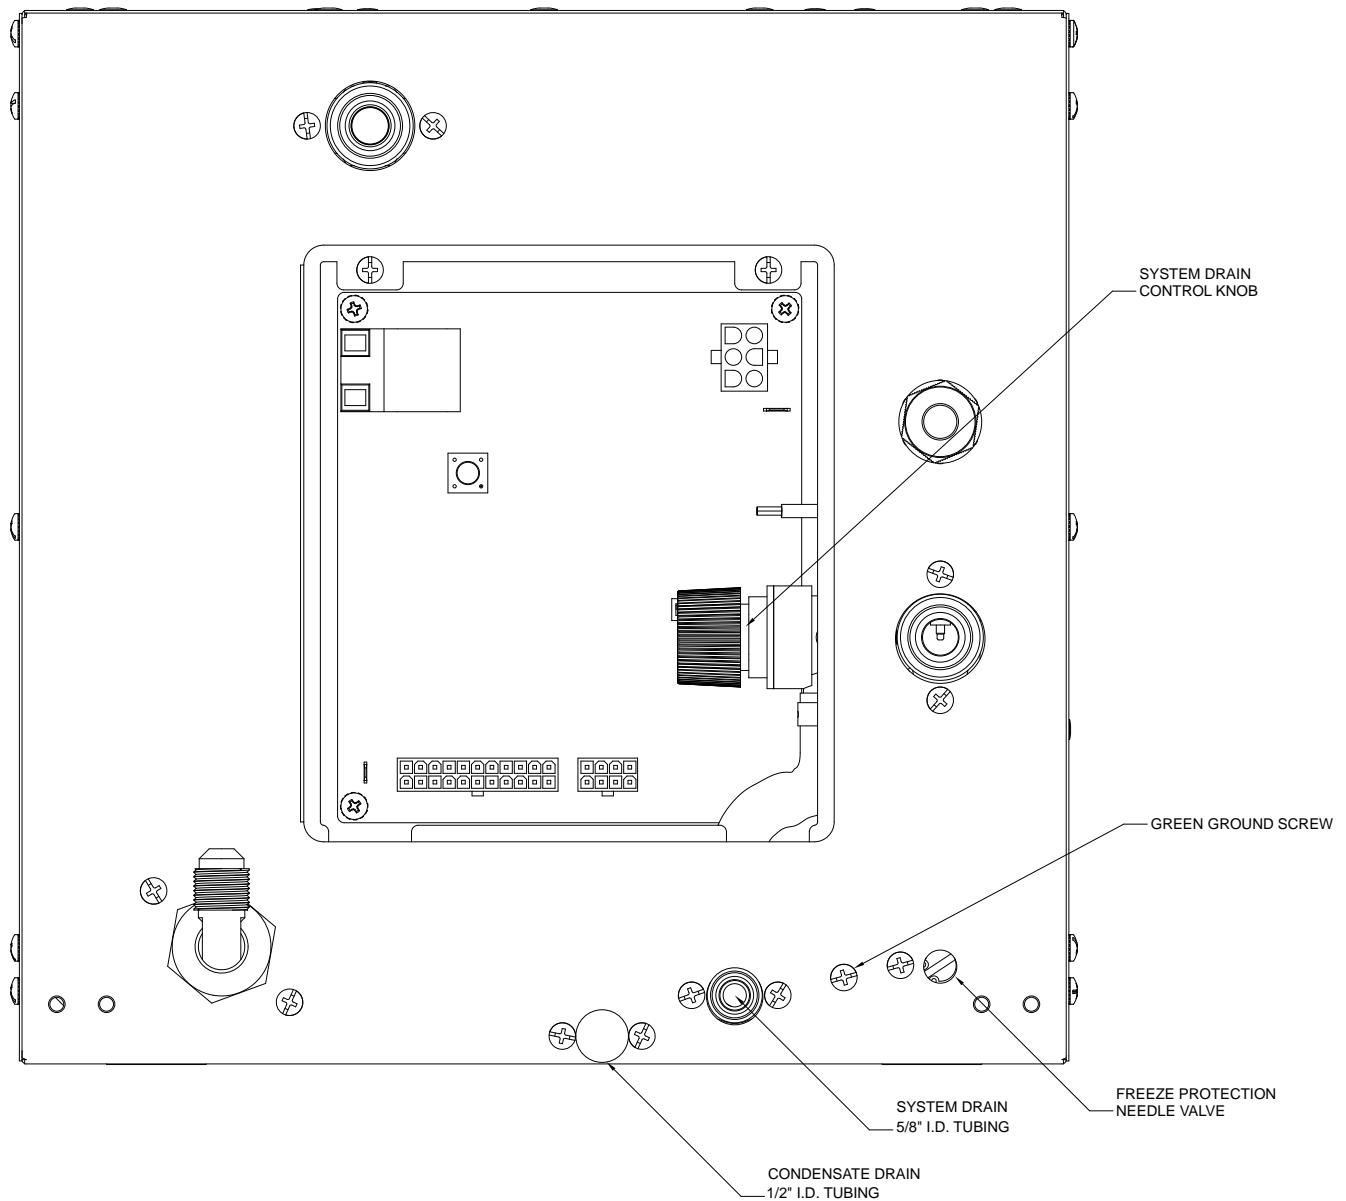


Figure 10



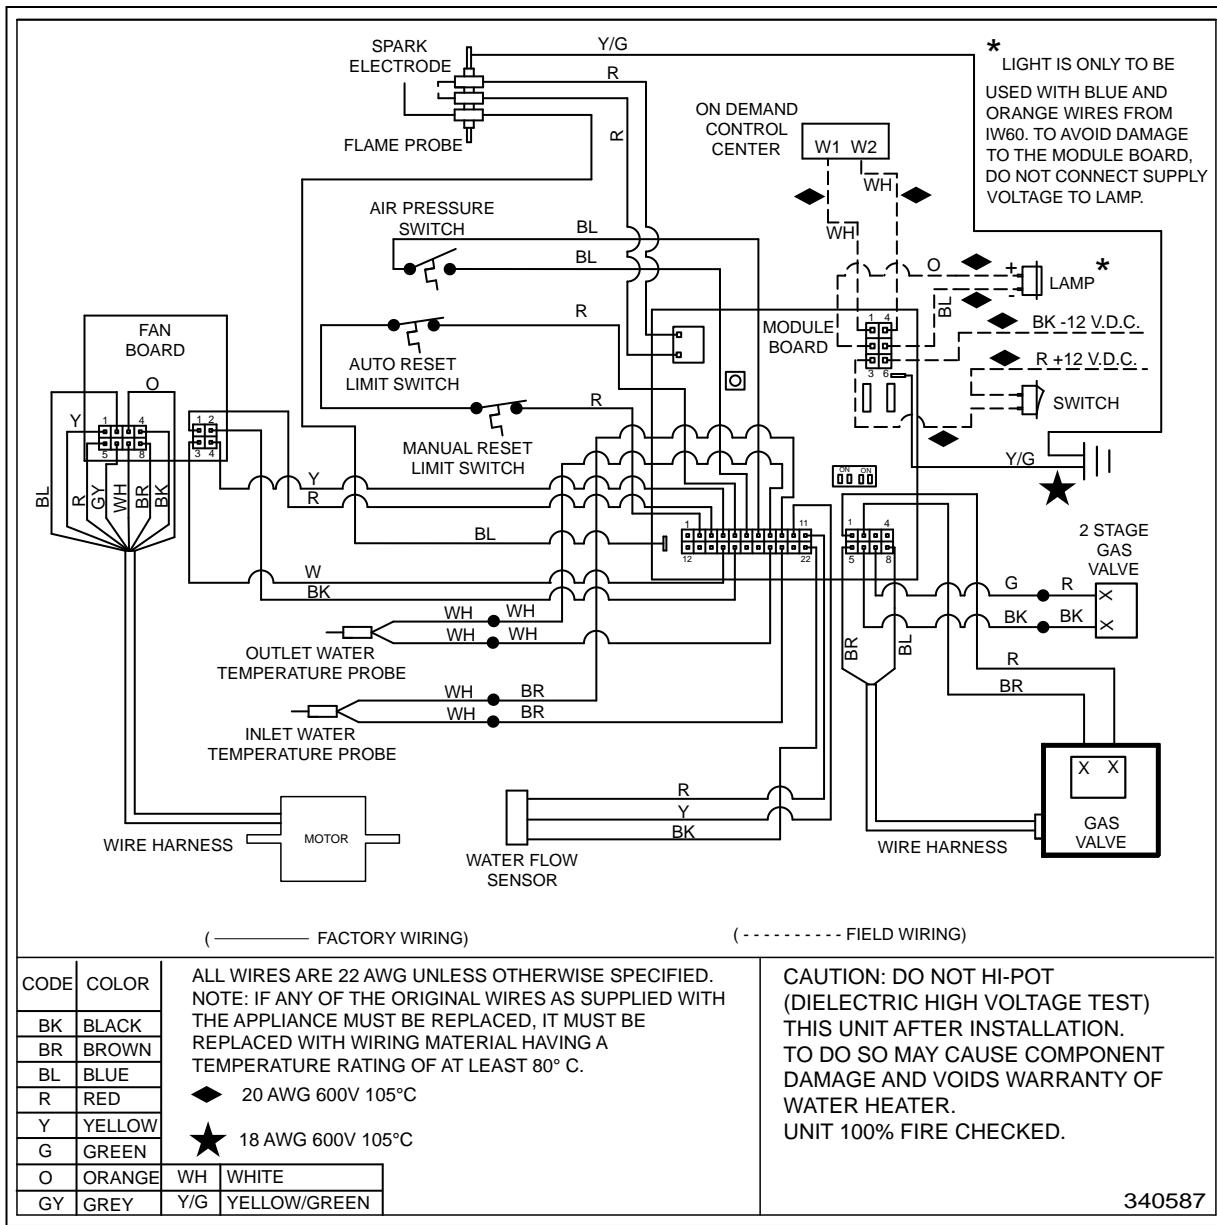


Figure 11

## STANDARD SWITCH AND LIGHT ASSEMBLY

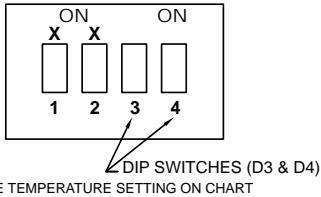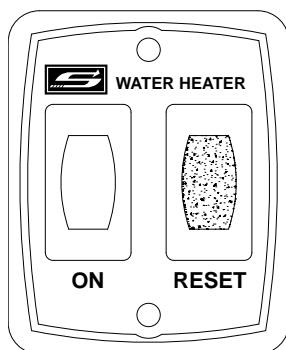

\* ON DEMAND WATER HEATER IS FACTORY SET AT 120°F (49°C).

Figure 12


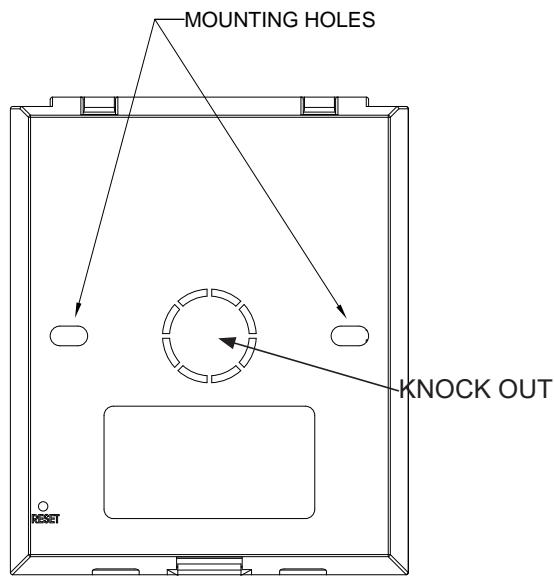



Figure 14

FIGURE 13: OPTIONAL ON DEMAND CONTROL CENTER (PN: 161253 OR 161252)

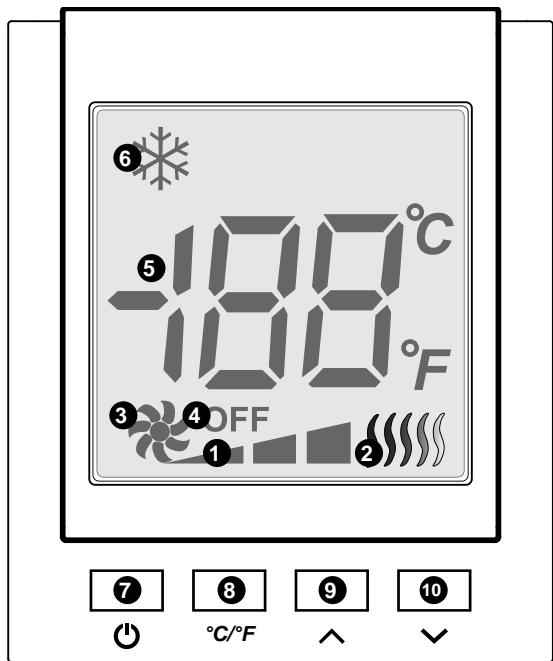

DISPLAY DESCRIPTION			
1		BURNERS	2 BURNERS 5 BURNERS
2		FLAME	This icon is displayed when FLAME is established.
3		BLOWER	This icon is displayed when the BLOWER is running
4		STATUS INDICATOR	This icon is displayed when the Water Heater is in standby mode, ready to be used.
5		SETTING TEMP INDICATOR; OUTLET WATER TEMP INDICATOR	A. When setting the water temperature, the temperature display will flash. After SET Temperature is reached, the display stops flashing after a few seconds. B. When the demand for hot water has been terminated, the display will return to the SET Temperature. C. When the water heater is turned off, the letters "OF" will be display.
6		FREEZE PROTECTION	This icon is displayed when the FREEZE PROTECTION MECHANISM is engaged.
BUTTON DESCRIPTION			
7		ON/OFF	Power Button. Switch from turning unit ON or turning unit OFF.
8		SWITCH	Hold for 5 seconds to switch between degrees (°) Celsius or degrees (°) Fahrenheit
9		UP	INCREASE SET Temperature by 1 degree increments. Setting range is 35°C/95°F to 55°C/130°F
10		DOWN	DECREASE SET Temperature by 1 degree increments. Setting range is 35°C/95°F to 55°C/130°F

OPTIONAL ON DEMAND CONTROL CENTER (PN: 161291 OR 161292)

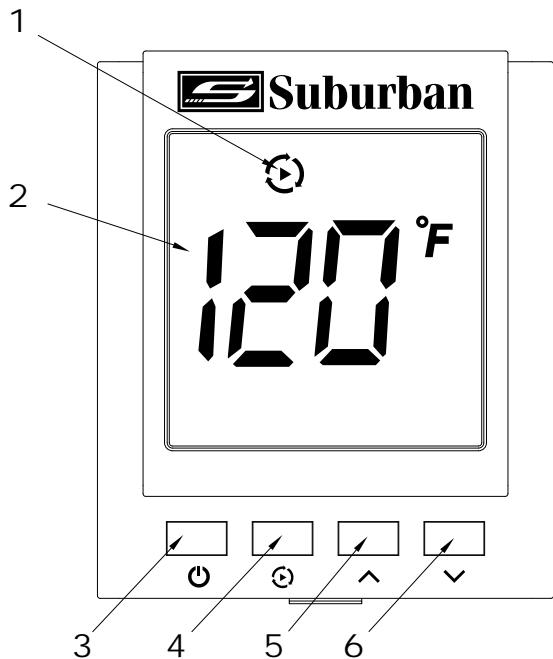

DISPLAY DESCRIPTION			
1		RECIRCULATION	THIS FEATURE IS ONLY AVAILABLE ON THE NAUTILUS RL (IW60RL)
2		SETTING TEMP INDICATOR; OUTLET WATER TEMP INDICATOR	A. When setting the water temperature, the temperature display will flash. After SET Temperature is reached, the display stops flashing after a few seconds. B. When the demand for hot water has been terminated, the display will return to the SET Temperature. C. When the water heater is turned off, the letters "OFF" will be display.
BUTTON DESCRIPTION			
3		ON/OFF	Power Button. Switch from turning unit ON or turning unit OFF.
4		RECIRCULATION	THIS FEATURE IS ONLY AVAILABLE ON THE NAUTILUS RL (IW60RL)
5		UP	INCREASE SET Temperature by 1 degree increments. Setting range is 35°C/95°F to 55°C/130°F*
6		DOWN	DECREASE SET Temperature by 1 degree increments. Setting range is 35°C/95°F to 55°C/130°F*

\*To switch between degrees (°) Fahrenheit and degrees (°) Celsius, press and hold both the UP and DOWN buttons until the °F or °C starts blinking. Then press the UP or DOWN button to switch.

# TWO YEAR LIMITED WARRANTY SUBURBAN RECREATIONAL VEHICLE WATER HEATER

## TWO YEAR LIMITED WARRANTY

This Suburban product is warranted to the original purchaser to be free from defects in material and workmanship under normal use and maintenance for a period of two years from date of purchase whether or not actual use begins on that date. It is the responsibility of the consumer/owner to establish the warranty period. Suburban does not use warranty registration cards for its standard warranty. You are required to furnish proof of purchase date through a Bill of Sale or other payment records.

Suburban will replace any parts that are found defective within the first two years and will pay a warranty service allowance directly to the recommended Suburban Service Center at rates mutually agreed upon between Suburban and its recommended service centers. Replacement parts will be shipped FOB the shipping point within the Continental United States, Alaska and Canada to the recommended service center performing such repairs. All freight, shipping and delivery costs shall be the responsibility of the owner. The exchanged part or unit will be warranted for only the unexpired portion of the original warranty. Before having warranty repairs made, confirm that the service agency is a recommended service center for Suburban. **DO NOT PAY THE SERVICE AGENCY FOR WARRANTY REPAIRS; SUCH PAYMENTS WILL NOT BE REIMBURSED.**

Suburban reserves the right to examine the alleged defect in the water heater or component parts, and it is the owner's obligation to return the water heater and/or component parts to Suburban or its representative. When returning a water heater, it must include all component parts and the serial number plate. Returned component parts must be individually tagged and identified with the water heater's model number, serial number and date of installation.

For warranty service, the owner/user should contact the nearest recommended Suburban Service Center, advising them of the model and serial numbers (located on the water heater) and the nature of the defect. Transportation of the RV to and from the Service Center and/or travel expenses of the Service Center to your location is the responsibility of the owner/user. A current listing of recommended service center may be obtained from Suburban's website: [www.Airxcel.com](http://www.Airxcel.com). If you cannot locate a recommended service center locally, the service agency chosen to perform warranty repairs must contact our Service Department at 423-775-2131 for authorization before making repairs. Unauthorized repairs made will not be paid by Suburban.

## LIMITATION OF WARRANTIES

ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH EACH LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER OR OTHER PERSON WHOMSOEVER.

## SUBURBAN WILL NOT BE RESPONSIBLE FOR:

1. Normal maintenance as outlined in the installation, operating and service instructions owner's manual including cleaning of component parts and cleaning or replacement of the burner orifice. Any water damage arising, directly or indirectly, from any defect in the water heater or component parts or from its use.
2. Initial checkouts and subsequent checkouts which indicate the water heater is operating properly, or diagnosis without repair.
3. Damage or repairs required as a consequence of faulty or incorrect installation or application not in conformance with Suburban instructions.
4. Failure to start and/or operate due to loose or disconnected wires; water or dirt in controls, fuel lines and gas units; improper gas pressure; low voltage.
5. Cleaning or adjustment of components; electrode, burner tube, pilot and thermocouple.
6. Costs incurred in gaining access to the water heater.
7. Parts or accessories not supplied by Suburban.
8. Freight charges incurred from parts replacements.
9. Damage or repairs needed as a consequence of any misapplication, abuse, unreasonable use, unauthorized alteration, improper service, improper operation or failure to provide reasonable and necessary maintenance.
10. Suburban products whose serial number has been altered, defaced or removed.
11. Suburban products installed or warranty claims originating outside the Continental U.S.A., Alaska, Hawaii and Canada.
12. Damage as a result of floods, winds, lightning, accidents, corrosive atmosphere or other conditions beyond the control of Suburban.
13. ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY, ECONOMIC OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER

Some states do not allow the exclusion of incidental or consequential damages, so the above limitation may not apply to you.

NO REPRESENTATIVE, DEALER, RECOMMENDED SERVICE CENTERS OR OTHER PERSON IS AUTHORIZED TO ASSUME FOR SUBURBAN MANUFACTURING COMPANY ANY ADDITIONAL, DIFFERENT OR OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS SUBURBAN PRODUCT.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

## IF YOU HAVE A PRODUCT PROBLEM

**FIRST:** If your RV has its original water heater and is still under the RV manufacturer's warranty, follow the steps suggested by your dealer or manufacturer of the RV.

**SECOND:** Contact a conveniently located recommended Suburban Service Center. Describe to them the nature of your problem, make an appointment, if necessary, and provide for delivery of your RV to the selected service center.

**THIRD:** For the location of the nearest Service Center, refer to the listing provided or contact:

AIRXCEL, INC. - SUBURBAN DIVISION  
Customer Service Department  
676 Broadway Street  
Dayton, Tennessee 37321  
(423) 775-2131, Ext. 7101  
[www.Airxcel.com](http://www.Airxcel.com)

## FOR FUTURE REFERENCE, YOU SHOULD RECORD THE FOLLOWING INFORMATION:

MODEL NUMBER: \_\_\_\_\_

SERIAL NUMBER: \_\_\_\_\_

STOCK NUMBER: \_\_\_\_\_

DATE OF PURCHASE: \_\_\_\_\_



**POUR RÉFÉRENCE ULTRÉRIEURE, VOUS DEVEZ ENREGISTRER LES INFORMATIONS**

SUIVANTES :

 NUMERO DE MODÈLE:  
 NUMERO DE SÉRIE:  
 NUMERO DE STOCK:  
 DATE D'ACHAT:

www.Airxcel.com

+1 (423) 775-2131, poste 7101

Dayton, Tennessee 37321

676 Broadway Street

Service-clinérale

AIRXCEL, INC. - DIVISION SUBURBAN

**PRÉSIDENT PROBLÈME CONCERNANT UN PRODUIT**

La présente garantie vous accorde des droits spécifiques, en plus d'autres droits éventuels variant d'un Etat, d'une province ou d'un territoire à un autre.

**PRÉSENT PRODUIT SUBURBAN.**

AUCUN REPRÉSENTANT, CONCESSIONNAIRE, CENTRE DE SERVICE RESPONSABLE OU UNE AUTRE PERSONNE NEST AUTORISÉ(E) A ASSUMER POUR CERTAINS ÉTATS NE PERMETTENT PAS L'EXCLUSIVITÉ DES DOMMAGES INDIRECTS OU CONSÉCUTIFS, DE SOUVENT QUE LA LIMITATION CI-DESSUS PEUT NE PAS S'APPLIQUER DANS VOTRE CAS.

13. Des dommages causés par une installation, le vent, la foudre, les accès, une atmosphère corrosive ou autre condition indépendante de la volonté de Suburban;

12. Des produits Suburban installés ou des réclamations au titre de la garantie provoquées dans les États-Unis continentaux, de l'Alaska, d'Hawaï et du Canada;

11. Des produits Suburban dont le numéro de série a été modifié, effacé ou enlevé;

10. Des dommages résultant d'un accident ou d'une utilisation impropre, abusive ou défaillante, modifiée, non autorisée, entretenue inappropriée,

9. Des frais de transport encourus pour le remplacement de pièce;

8. Des pièces ou d'un accès pour Suburban;

7. Des frais encourus pour l'accès au chauffage;

6. Du nettoyage ou de l'ajustement des composants; d'eau ou de brûleur, d'une veilleuse et du thermocouple;

5. Appareils de démarre et/ou de fonctionnement gaz incorrect; d'une basse tension;

4. Des dommages ou des préparations nécessaires à la suite d'une installation défectueuse ou incorrecte non conforme aux conditions de Suburban;

3. Des vêtements ou des préparations nécessaires à la suite d'une installation défectueuse ou incorrecte non conforme aux conditions de Suburban;

2. Le nettoyage ou le remplacement du manuel du propriétaire, les consignes d'installation, de fonctionnement et d'entretien, y compris le nettoyage des composants ou de son utilisation;

1. L'entretien normal décrit dans le manuel du propriétaire, les consignes d'installation, de fonctionnement et d'entretien, y compris le nettoyage des composants.

**SUBURBAN NE SERA PAS TENUE RESPONSABLE DE :**  
CARANTINE SOIT EXCLUSIVES ET NE PEUVENT PAS ÊTRE MODIFIÉES, ETENDUES, OU CHANGÉES PAR UN DISTRIBUTEUR, UN CONCESSIONNAIRE OU UNE IMPACTE: ANSI, LES LIMITATIONS CI-DESSUS PEUVENT NE PAS S'APPLIQUER DANS VOTRE CAS. LES GARANTIES EXPLICITES AU TITRE DE LA PRÉSENTE PENDANT LAQUELLE GARANTIE EST ACCORDEE. CERTAINS ÉTATS NE PERMETTENT PAS LA LIMITATION DE LA DUREE D'UNE GARANTIE TOUTE GARANTIE IMPLICITE (Y COMPRIS TOUTE GARANTIE IMPLICITE DE QUALITÉ MARCHANDE) EST LIMITÉE EN TERMES DE DUREE À LA PÉRIODE AUTRE PERSONNE OUVELLE QUE CELLE QUI SE RÉFÉRE À SON UTILISATION.

Pour le service au titre de la garantie, le propriétaire doit contacter le centre de service Suburban recommandé le plus proche, pour informer des numéros de modèle et de série (série sur le chauffage-eau) et la nature du défaut. Tout dommage décaulant de l'eau, directement ou indirectement, de tout défaut au chauffage-eau ou aux composants ou de son utilisation.

Suburban ne sera pas payée par Suburban.  
Pour le service au titre de la garantie, le propriétaire doit contacter le centre de service Suburban recommandé le plus proche, le numéro de modèle et de série sur le chauffage-eau, il doit composer tous les composants et la plaque de retourner le chauffage-eau.

Suburban se réserve le droit d'examiner le défaut présent dans les cartes d'enregistrement individuel avec le numéro de modèle, le numéro de série et la date d'installation du produit.


Suburban n'utilise pas les cartes d'enregistrement individuel avec le numéro de modèle, le numéro de série et la date d'installation du produit.

Suburban garantit à la hauteur du défaut initial de la garantie pour sa garantie standard. La preuve de la date d'achat par un acte de vente ou autre dossier de paiement permet de démontrer que la garantie a été respectée.

**GARANTIE LIMITÉE DE DEUX ANS**  
**CHAUFE-EAU SUBURBAN POUR VÉHICULES RÉCREATIFS**

\* Pour basculer entre les degrés Fahrenheit et les degrés Celsius, maintenez enfoncées les boutons HAUT et BAS jusqu'à ce que "F ou °C" commence à clignoter. Appuyez ensuite sur le bouton HAUT ou BAS pour changer.

DISPLAY DESCRIPTION		BUTTON DESCRIPTION	
1	RECIRCULATION SUR LE NUTILUS RL (W60RL)	1	RECIRCULATION SUR LE NUTILUS RL (W60RL)
2	REGAGAGE DU POINT DE CONSIGNE DE TEMPERATURE. La température cible augmente de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.	2	REGAGAGE DU POINT DE CONSIGNE DE TEMPERATURE. La température cible augmente de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.
3	ALLUMÉ / ÉTEINT Bouton marche. Commutateur pour allumer ou éteindre l'unité.	3	ALLUMÉ / ÉTEINT Bouton marche. Commutateur pour allumer ou éteindre l'unité.
4	RECIRCULATION CETTE FONCTION EST DISPONIBLE UNIAUEMENT SUR LE NUTILUS RL (W60RL)	4	RECIRCULATION CETTE FONCTION EST DISPONIBLE UNIAUEMENT SUR LE NUTILUS RL (W60RL)
5	UP	5	UP
6	VERS LE BAS DIMINUE LA température par incrément de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.	6	VERS LE BAS DIMINUE LA température par incrément de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.

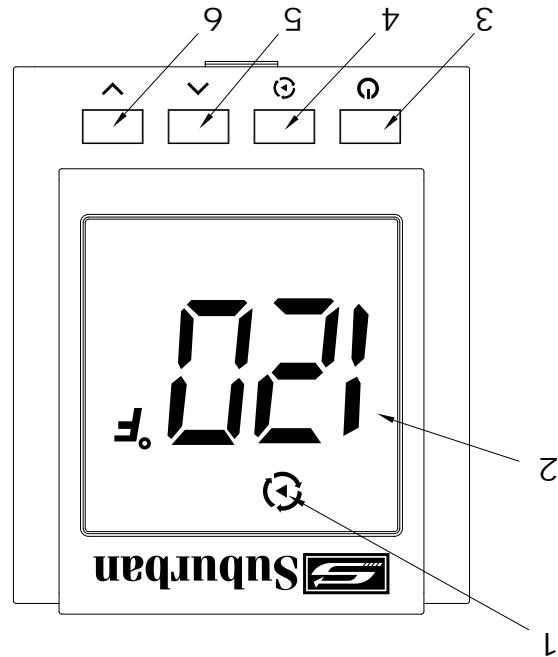

MODULE DE COMMANDE INSTANTANÉ EN OPTION (PN: 161291 OR 161292)

DISPLAY DESCRIPTION		BUTTON DESCRIPTION	
1	VENTILATEUR	1	VENTILATEUR
2	FLAMME	2	FLAMME Cette icône s'affiche lorsque la FLAMME est établie.
3	REFOULEMENT	3	REFOULEMENT Cette icône s'affiche lorsque le VENTILATEUR REFOULANT est en marche.
4	OFF INDICATEUR DE	4	OFF INDICATEUR DE Cette icône apparaît lorsque le chauffe-eau est en mode veille, prêt à être utilisé.
5	-188°C	5	-188°C REGAGAGE DU POINT DE CONSIGNE DE TEMPERATURE; La température cible diminue de 1 degré. La plage de régagage est de -95 °C / 95 °F à 55 °C / 130 °F.
6	PROTECTION ANTIGEL	6	PROTECTION ANTIGEL Cette icône est affichée lorsque le mécanisme de protection anti-gel est engagé.
7	SUS TENSION/HORS TENSION	7	BOUTON D'ALIMENTATION. Interrupteur pour la mise sous tension de l'appareil. L'interruption de la mise sous tension de l'appareil. Interrupteur pour la mise sous tension de l'appareil.
8	OC/F INTERRUPTEUR	8	OC/F INTERRUPTEUR Pendant 5 secondes pour passer des degrés (°) Celsius aux degrés (°) Fahrenheit.
9	FLECHE HAUT	9	FLECHE HAUT AUGMENTER la température de CONSIGNE par increments de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.
10	FLECHE BAS	10	FLECHE BAS DIMINUER la température de CONSIGNE par increments de 1 degré. La plage de régagage est de 35 °C / 95 °F à 55 °C / 130 °F.

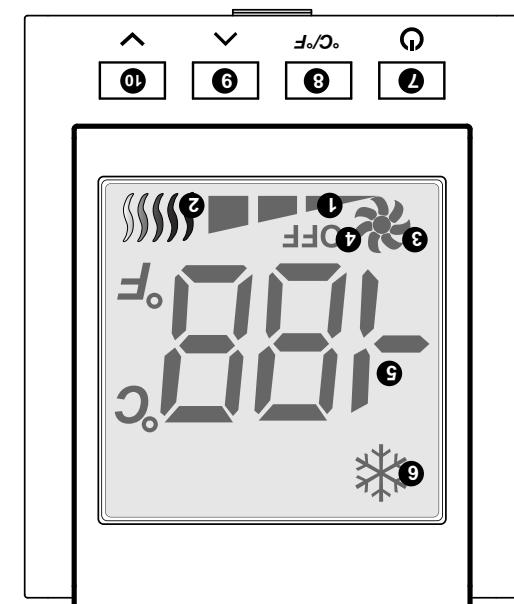
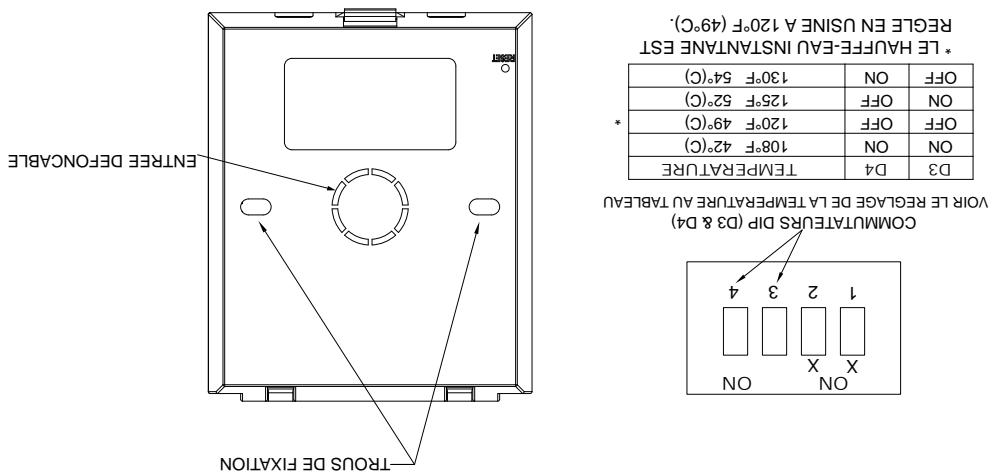


FIGURE 13: MODULE DE COMMANDE INSTANTANÉ EN OPTION (PN: 161253 OU 161252)

Figure 12



**Figure 14**

## ENSEMBLE INTERRUPTEUR ET VOYANT STANDARD

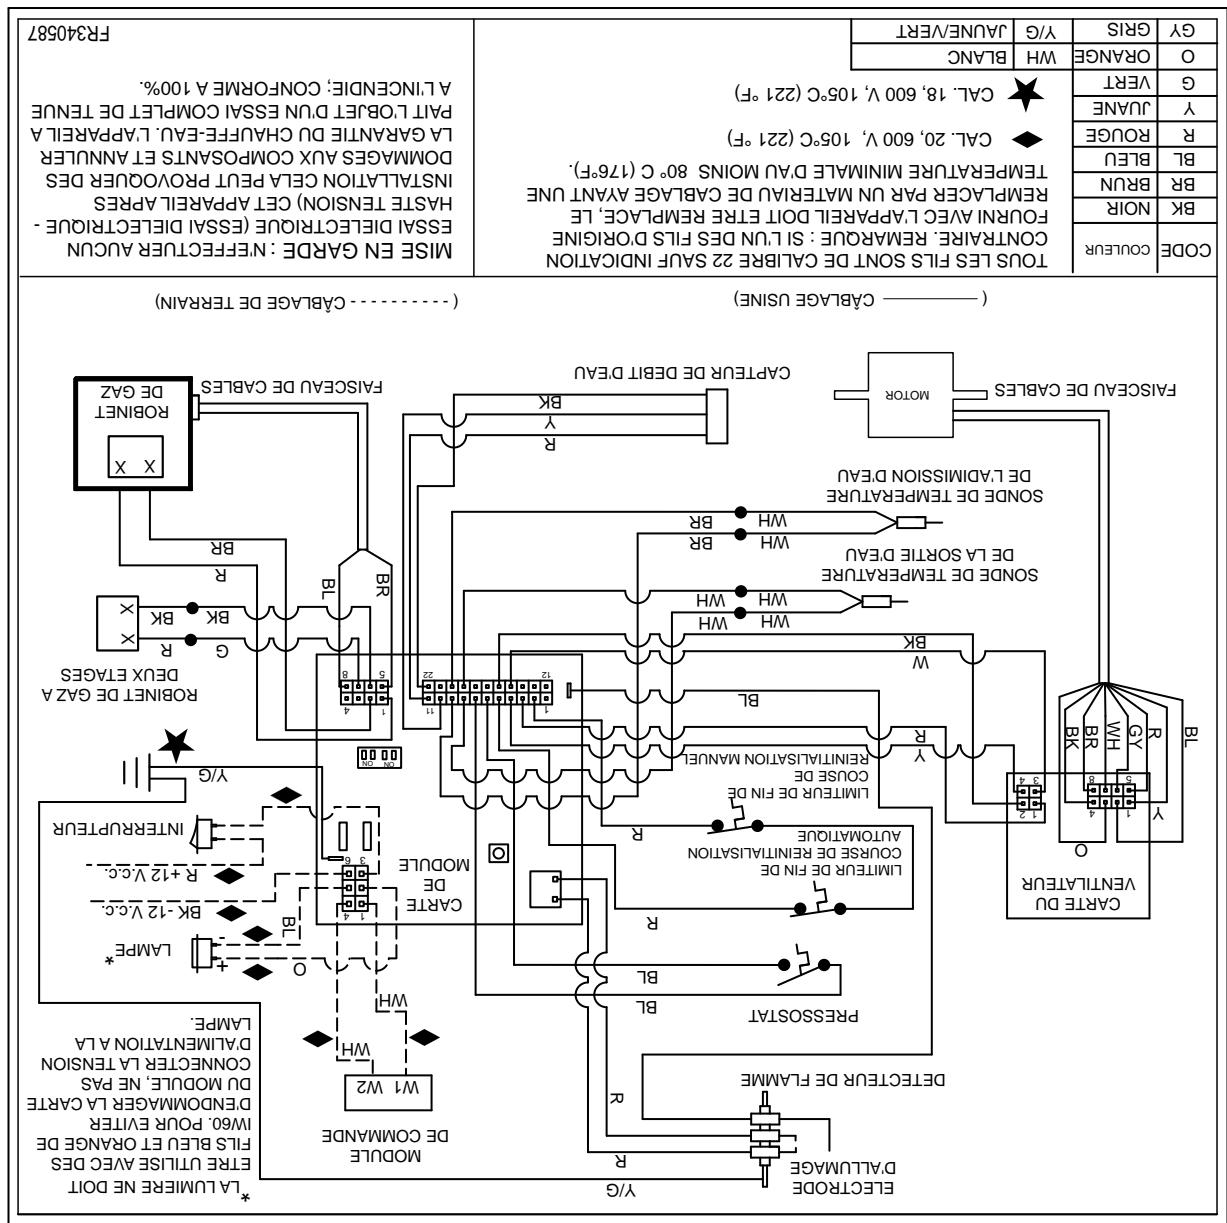


Figure 10

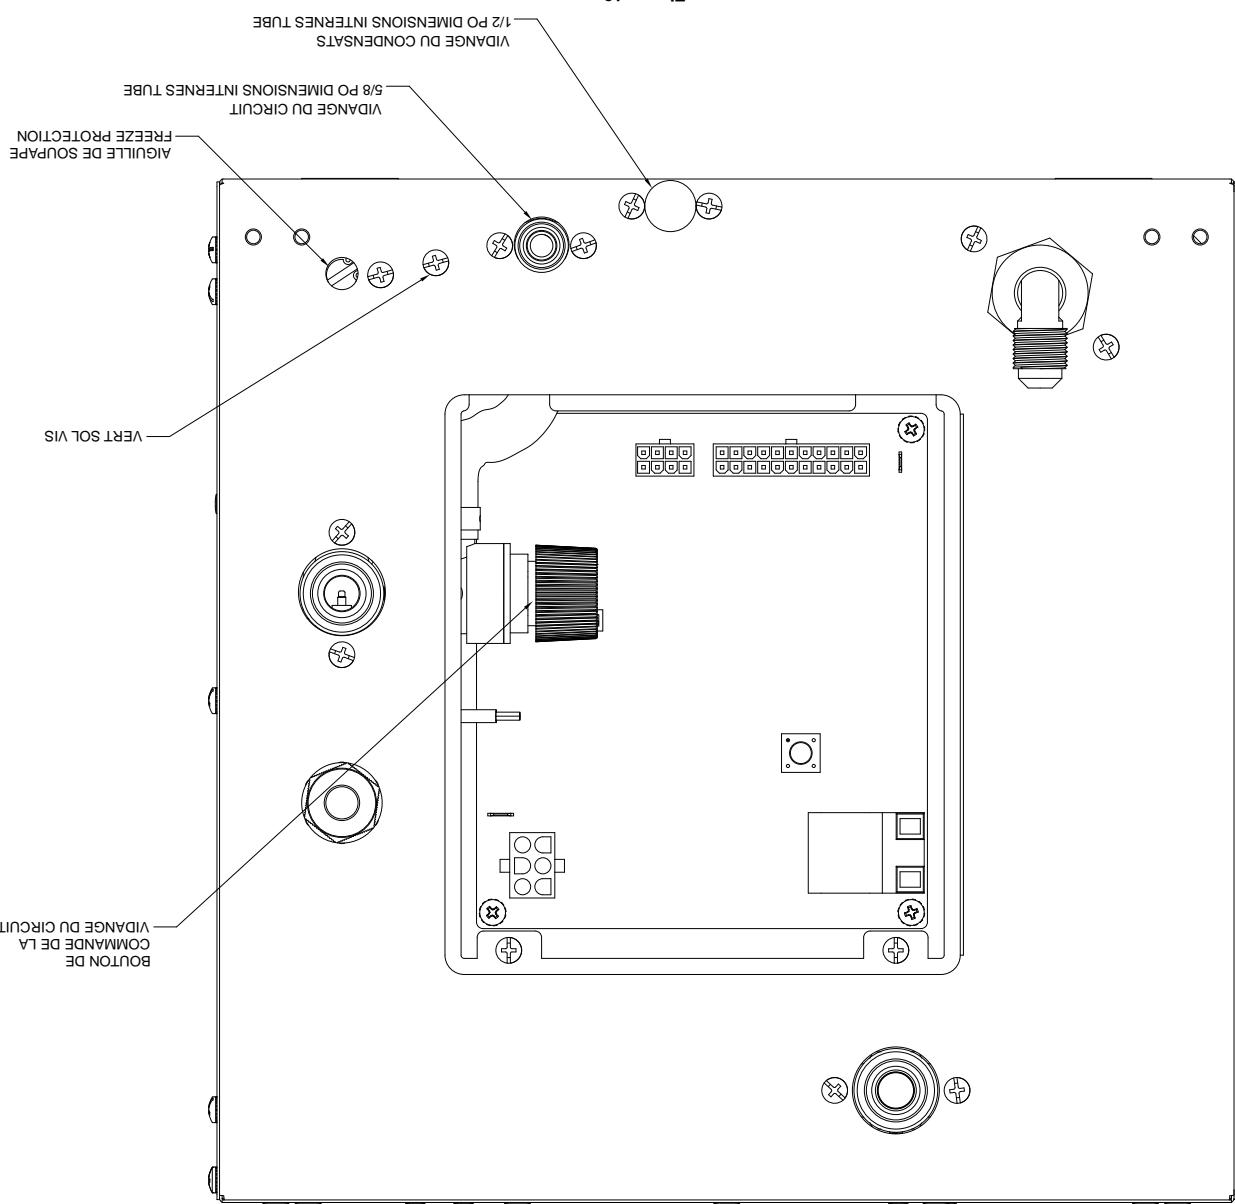


Figure 9

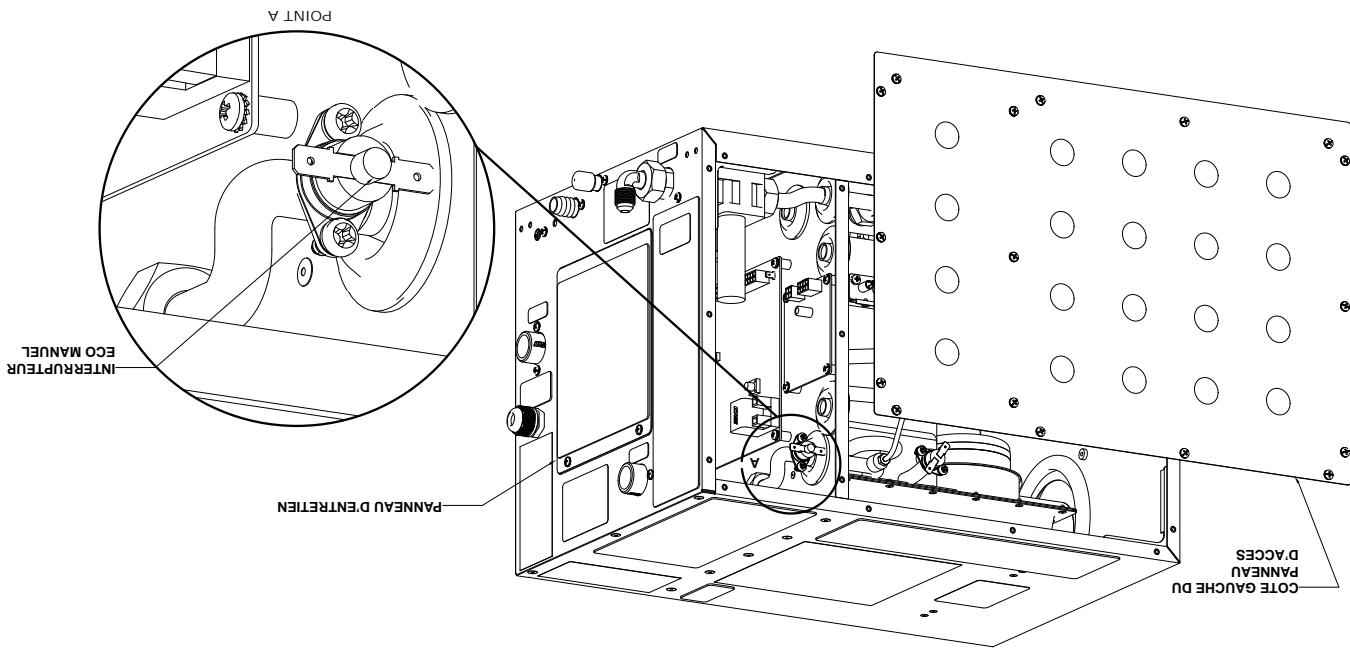


Figure 8

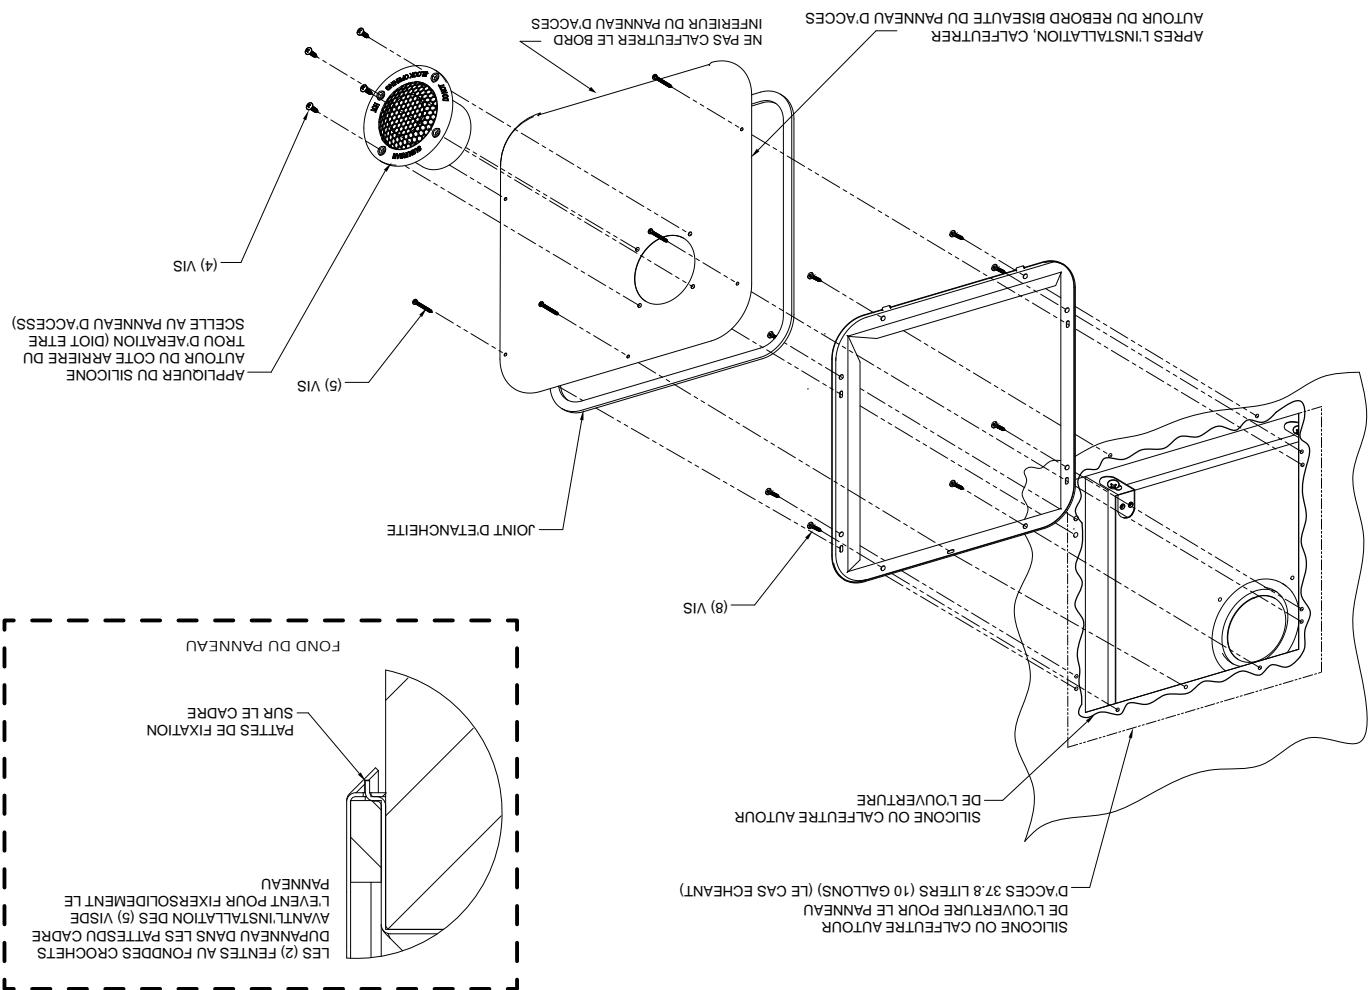


Figure 7B

22,7 LITRES	12,433 CM	37,85 LITRES	16,850 CM
<b>PANNÉAU D'ACCÈS SUBURBAN</b>			

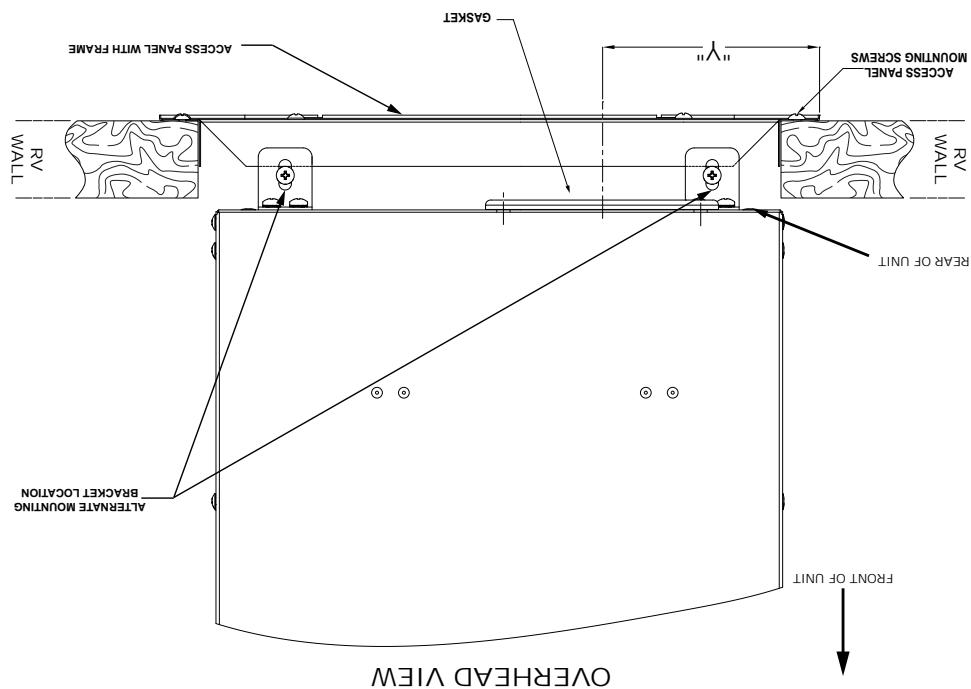


Figure 7A

PIÈCE POUR BOUCHON D'ÉVÉNT N° 260617 MONTREE POUR L'INSTALLATION SANS PANNEAU D'ACCÈS, DIMENSIONS MAX « X » DE 508 cm

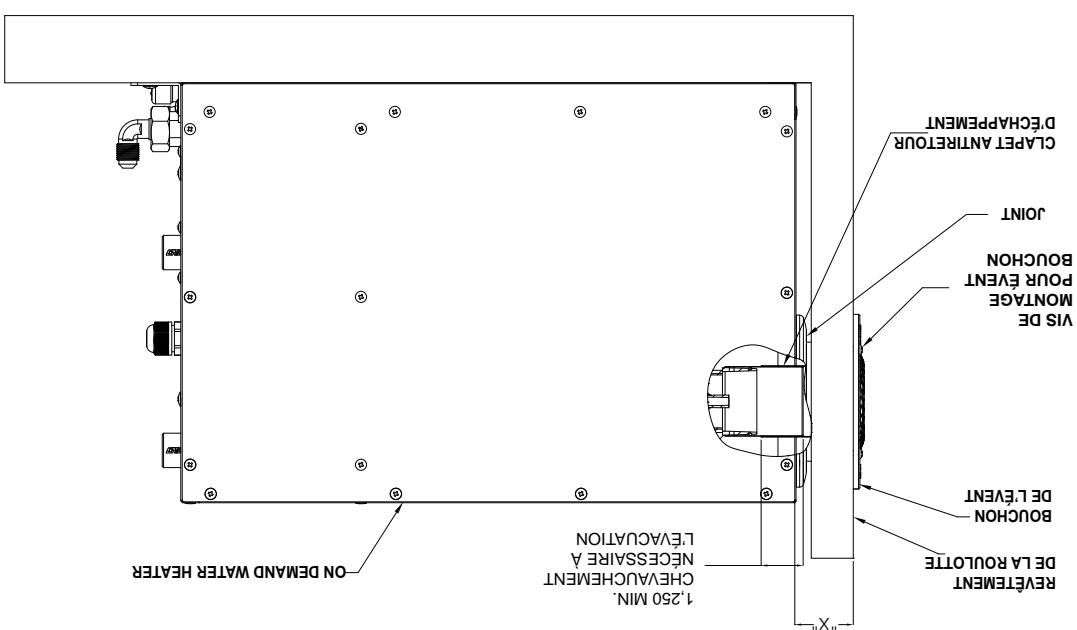


Figure 6


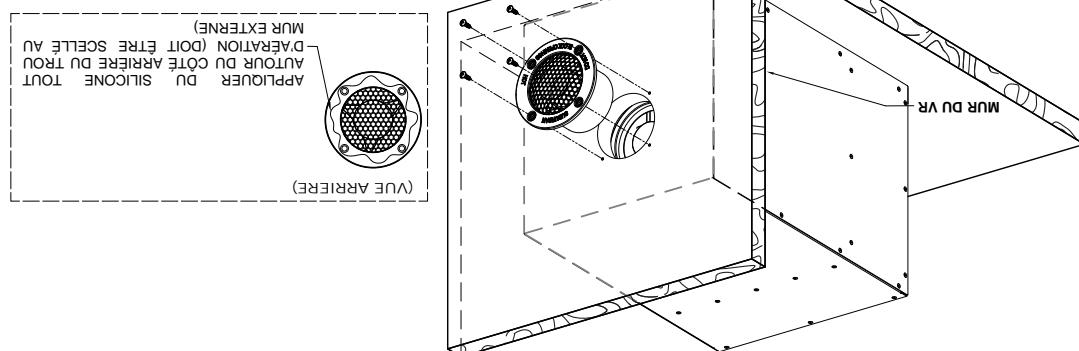


Figure 5

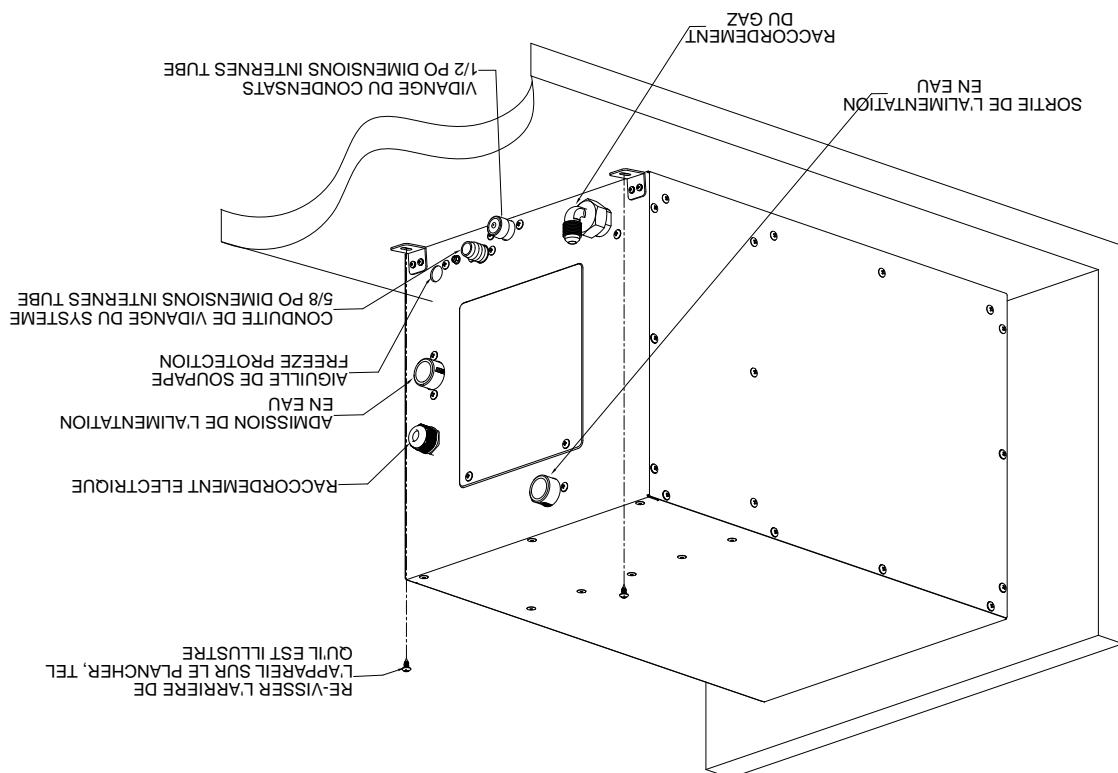

## ► AVERTISSEMENT

**RETRIEVER LE ON DEMAND WATER HEATER**

1. Fermer l'alimentation en gaz et débrancher le tuyau d'alimentation en gaz du chauffe-eau.
2. Fermer l'alimentation 12 Vcc du chauffe-eau.
3. Débrancher l'alimentation en eau. Évouter l'eau du système.
4. Débrancher les conduites d'eau chaude et d'eau froide du chauffe-eau.
5. Retirer les vis à l'arrière de l'appareil.
6. Retirer l'assemblage du bouton de l'évent.
7. Retirer le bouton de l'évent.
8. Utiliser les instructions fournies dans ce manuel à partir de la page 3.

RESENSEIGNEMENTS SUR LE DETARTRAGE  
SOUPAGE DE DÉCOMPRESSION  
La Soupage de température est le décompresion est conçue pour ouvrir si la température de l'eau dans le chauffe-eau atteint 98 °C ou si la pression de l'eau dans le chauffe-eau atteint 999,7 kPa.

Chaque année, évacuer l'eau du système et remplir l'échangeur de chaleur avec une solution de détartage approuvée.

Lorsqu'il n'est pas en cours d'utilisation pour éviter les dommages causés par le dégagement des conduites d'eau si le robinet est fermé.

Il faut régulièrement détartrer le circuit d'eau soit à l'aide d'un détartrant à base de 5 tours de lave-vaisselle ou mécanisme de détartrage. Faire le robinet déscendre à la fin du détartrage puis débrancher l'appareil pour éviter que l'eau ne rentre dans les canalisations.

Pour être certain que l'unité est à l'arrêt du robinet d'eau et que l'eau dans le chauffe-eau est complètement évacuée, il faut faire fonctionner l'appareil pendant au moins une minute. Fermer le robinet d'eau et débrancher l'appareil pour empêcher qu'il y ait un dégagement dans les canalisations.

Si l'eau dans le chauffe-eau est utilisée pour faire fonctionner l'appareil, il faut faire fonctionner l'appareil pendant au moins une minute. Fermer le robinet d'eau et débrancher l'appareil pour empêcher qu'il y ait un dégagement dans les canalisations.

Si l'eau dans le chauffe-eau est utilisée pour faire fonctionner l'appareil, il faut faire fonctionner l'appareil pendant au moins une minute. Fermer le robinet d'eau et débrancher l'appareil pour empêcher qu'il y ait un dégagement dans les canalisations.

L'admission du chauffe-eau.

The diagram illustrates an incorrect way to install a lens. A rectangular frame represents a camera body. A circular lens is shown attached to the side of the frame, positioned below the sensor area. The word "INCORRECT" is written above the lens, and the French text "Évitez aux lins d'être installés sur le dessus de l'élément" is written above the frame.

A perspective drawing of a rectangular room corner. The room has three visible walls forming a corner. In the top-left corner, there is a small circular hole, possibly representing a vent or a window. The floor is shown as a flat surface meeting the walls at the corners.

**Figure 3**

**CORRECT**

Elongated auxiliary fins distributed along element

The diagram illustrates a cross-section of a wind tunnel. A horizontal rectangular duct is shown with its front face removed to reveal the interior. A vertical wall extends from the top edge of the duct downwards. A horizontal plate, representing the floor of the tunnel, is attached to the vertical wall. A circular hole is cut into the floor plate. Two elongated, thin rectangular fins are attached to the floor plate, positioned symmetrically about the center of the circular hole. The text "Elongated auxiliary fins distributed along element" is written above the duct, and the word "CORRECT" is written vertically next to the fins.

The figure is a technical drawing of a circular component. The outer boundary is labeled "APPREIL". Inside, there is a dashed circle labeled "450 TYPE". A horizontal dimension line indicates a width of "4,370" between two points on the outer edge. A vertical dimension line on the right indicates a height of "9,488" from the base to the top of the outer edge. Another vertical dimension line on the left indicates a height of "3,945" from the base to a point on the inner dashed circle. At the very top center, there is a small label "ENS EBLE". A horizontal dimension line at the top indicates a total width of "2,256" from the left edge to the right edge. A vertical dimension line on the far left indicates a height of "1,480" from the base to the top edge. The text "DIAMETRE DE 0,125 (4 ENDROITS)" is located near the bottom left, and "DIAMETRE DE 3,750 TROU POUR EVENT DE" is located near the top left.

**Figure 4**

Pour obtenir de l'information pour contacter une agence communiquez avec :  
AIRXCEL, Inc. - Suburban Division  
Customer Service Department  
676 Broadway Street, Dayville, TN 37321  
(423) 775-2131 Ext. 7101 • www.airxcel.com

Pour obtenir de l'information pour contacter une agence de service local, contactez un centre d'entretien Suburban recommandé près de chez vous. DÉCREVrez-là la nature du problème, prenez un rendez-vous (au besoin) et chargez-vous de le livraison de votre RR avec l'appareil installé.





STRUCTURES DE FONCTIONNEMENT AVEC LE CENTRE DE COMMANDE EN OPTION

RELATIVES A LA SECURITE. Si vous ne délevez pas d'ordre de gaz, passez alors au point B des INFORMATIONS

Mettre l'appareil sous tension.  
Appuyer sur le bouton de mise en marche. Le CENTRE DE COMMANDE instantané appelle par défaut dans le VR. Le chargement égal à l'initialisation du « débit ». Pour une quête unique par défaut dans le VR.

Si un verrouillage est rencontré au cours d'un essai de déblocage, le CODE D'ERREUR devra être réinitialisé en format, puis un ouvrant le double ou en métal (l'intérieur du Centre de commande d'ouverture).

**ENSEMBLE INTERRUPTEUR ET VOYANT  
INSTRUCTIONS DE FONCTIONNEMENT**

A. Cet appareil n'a pas de pieds de veillue. Il possède un dispositif d'alumage qui allume automatiquement le briquet. Ne pas essayer d'allumer le briquet à la main.

B. AVANT L'UTILISATION, humer l'air tout autour de l'appareil afin d'y déceler une éventuelle odeur de gaz. S'assurer de sentir au niveau du sol car certains gaz sont plus lourds que l'air et s'accumulent au niveau du sol.

C. Faire sortir toutes les personnes du véhicule.





AIRXCEL, INC. - SUBURBAN DIVISION  
423-775-2131 • www.Airxcel.com  
676 Broadway Street • Dayton, Tennessee 37321



## MANUEL D'INSTALLATION ET D'UTILISATION

### ▲ AVERTISSEMENT

Vidanger ou remplir avec de l'antigel approuvé pour véhicules récréatifs si exposé à des températures de congélation lors de l'entreposage en hiver.

### ▲ AVERTISSEMENT

Le non-respect des consignes de sécurité pourrait entraîner des blessures graves, la mort ou des dégâts matériels.

### CONTRLE GEL

NAUTILUS ON DEMAND WATER HEATER (W60) GAZ À ÉVACUATION DIRECTE avec ALLUMAGE DIRECT PAR ETINCELLE POUR INSTALLATION DANS DES VÉHICULES RÉCRÉATIFS



Intertek

### ▲ AVERTISSEMENT

Ne pas entreposer ou utiliser d'essence ou d'autres vapeurs et liquides inflammables à proximité de l'appareil ou de tout autre appareil.

### ▲ AVERTISSEMENT

Le non-respect des consignes de sécurité pourrait entraîner des blessures graves, la mort ou des dégâts matériels.

L'installation de cet appareil doit être effectuée conformément aux instructions fournies dans ce manuel. Aucun écrivain, représentant ou employé de Suburban ou autre personne n'a l'autorité de changer, de modifier ou de renoncer à toute disposition des instructions contenues dans ce manuel.

Un réglage, une modification, un service, une réparation ou un entretien inadequat peuvent entraîner des blessures ou la mort.

Lire et observer toutes les instructions et précautions de ce manuel. L'installation et l'entretien doivent être effectués par une agence d'entretien qualifiée ou le fournisseur de gaz.

INSTALLATEUR : APPOSER CES INSTRUCTIONS SUR UN APROXIMATIF DU CHAUFFE-EAU.  
PROPRIÉTAIRE : CONSERVER CES INSTRUCTIONS ET LA GARANTIE AUX FINIS DE CONSULTATION ULTÉRIEURE.  
TOUTES QUESTIONS DE NATURE TECHNIQUE OU RELATIVES À LA GARANTIE DOIVENT ÊTRE ADDRESSES À L'ENTREPRISE FIGURANT SUR LA GARANTIE OU LA PLAQUE SIGNALétique DU CHAUFFE-EAU.

- Ne pas ouvrir l'alimentation en gaz jusqu'à ce que les fuites de gaz soient effectuées par un installateur qualifié, réparées.
- Si l'est pas possible de joindre un fournisseur de gaz au de technicien d'entretien qualifié, contacter le service des incendies le plus près pour les préparations.
- Contacter le fournisseur de gaz au le technicien d'entretien qualifié le plus près pour la génération électrique.
- Ne pas faire démarrer le moteur du véhicule ou du génératrice électrique.
- Ne toucher à aucun interrupteur électrique ou à la source.
- Couper l'alimentation en gaz au niveau du réservoir ou à la source.
- Faire sortir toutes les personnes du véhicule.
- ODEUR DE GAZ

— QUE FAIRE EN PRÉSENCE D'UNE ODEUR DE GAZ

- Ne pas entreposer ou utiliser d'essence ou d'autres vapeurs et liquides inflammables à proximité de l'appareil ou de tout autre appareil.
- Couper l'alimentation en gaz au niveau du réservoir ou à la source.
- Ne toucher à aucun interrupteur électrique ou à la source.
- Faire sortir toutes les personnes du véhicule.
- Ne pas faire démarrer le moteur du véhicule ou du génératrice électrique.
- Contacter le fournisseur de gaz au le technicien d'entretien qualifié le plus près pour la génération électrique.
- Ne pas ouvrir l'alimentation en gaz jusqu'à ce que les fuites de gaz soient effectuées par un installateur qualifié, réparées.
- Si l'est pas possible de joindre un fournisseur de gaz au de technicien d'entretien qualifié, contacter le service des incendies le plus près pour les préparations.
- Contacter le fournisseur de gaz au le technicien d'entretien qualifié le plus près pour la génération électrique.
- Ne pas faire démarrer le moteur du véhicule ou du génératrice électrique.
- Ne toucher à aucun interrupteur électrique ou à la source.
- Couper l'alimentation en gaz au niveau du réservoir ou à la source.
- Faire sortir toutes les personnes du véhicule.
- QUE FAIRE EN PRÉSENCE D'UNE ODEUR DE GAZ

— L'installation et l'entretien doivent être effectués par un installateur qualifié, réparées.

- Ne pas ouvrir l'alimentation en gaz jusqu'à ce que les fuites de gaz soient effectuées par un installateur qualifié, réparées.
- Si l'est pas possible de joindre un fournisseur de gaz au de technicien d'entretien qualifié, contacter le service des incendies le plus près pour les préparations.
- Contacter le fournisseur de gaz au le technicien d'entretien qualifié le plus près pour la génération électrique.
- Ne pas faire démarrer le moteur du véhicule ou du génératrice électrique.
- Ne toucher à aucun interrupteur électrique ou à la source.
- Couper l'alimentation en gaz au niveau du réservoir ou à la source.
- Faire sortir toutes les personnes du véhicule.
- QUE FAIRE EN PRÉSENCE D'UNE ODEUR DE GAZ

— L'installation et l'entretien doivent être effectuées par un installateur qualifié, réparées.

**This manual has been provided courtesy of**

**My RV Works, Inc.**

**[www.myrvworks.com](http://www.myrvworks.com)**



**You can find more RV service manuals here:**

**[www.myrvworks.com/manuals](http://www.myrvworks.com/manuals)**

Over the years of running a mobile RV repair service, having a dedicated place to access service manuals for all the different appliances and components found on RVs was something that I always had a desire to create.

I hope this resource makes your RV repairs easier, as it has mine, but please be careful and follow proper safety practices when attempting to repair your own RV.

If in doubt, please consult with a professional RV technician!



DARREN KOEPP - OWNER, MY RV WORKS, INC.

***All service manuals provided on [www.myrvworks.com](http://www.myrvworks.com) are believed to be released for distribution and/or in the public domain.***